

# KAWAI

## *Concert Artist* CA13 Owner's Manual

---

Preparation Before Use

---

Playing the Piano

---

Internal Songs

---

Recorder

---

Settings

---

Appendix

**Thank you for purchasing this Kawai Concert Artist digital piano.**

This owner's manual contains important information regarding the usage and operation of the CA13 digital piano.

Please read all sections carefully, keeping this manual handy for future reference.

# Preface

## ■ About this Owner's Manual

Before attempting to play this instrument, please read the **Preparation Before Use** section from page 10 of this owner's manual. This section explains the name and function of each part, how to connect the power cable, and how to turn on the power.

The **Playing the Piano** section (page 12) provides an overview of the instrument's most commonly used functions, allowing the CA13 digital piano to be enjoyed almost immediately after being connected, while the **Internal Songs** section (page 17) includes information regarding the built-in demonstration songs, Piano Music pieces, and Lesson function.

The **Recorder** section (page 21) provides instructions on how to record and play back pieces stored in the instrument's internal memory, and the **Settings** section (page 23) details the settings that can be used to adjust a number of sound and keyboard characteristics, as well as basic MIDI functionality.

Finally, the **Appendix** section (page 36) includes listings for all demo, Piano Music, and Lesson function songs, a troubleshooting guide, assembly instructions, MIDI reference information, and full specification details.

## ■ CA13 Feature Highlights

### RM3 Grand wooden-key action with Ivory Touch key surfaces

The CA13 digital piano utilises Kawai's latest *RM3 Grand* wooden-key action, incorporating various grand piano action characteristics, such as contrasting hammer weights - appropriately graded for each playing range - bass key counterbalancing, and correctly located pivot points for both black and white keys. This unique 'seesaw' movement provides a consistent, evenly balanced action, while finely textured *Ivory Touch* key surfaces not only enhance the enjoyment of playing, but also help to absorb moisture, thus preventing fingers from slipping.

### Progressive Harmonic Imaging (PHI) with 88-key piano sampling

The CA13 digital piano captures the beautiful sound of Kawai's highly acclaimed hand-built concert grand piano, with all 88 keys of this exceptional instrument meticulously recorded, analysed and faithfully reproduced using proprietary *Progressive Harmonic Imaging*™ technology. This unique process accurately recreates the broad dynamic range of the original grand piano, affording pianists an extraordinary level of expressiveness ranging from the softest pianissimo to the strongest, boldest fortissimo.

Additional modelling techniques and effects, such as reverb and damper resonance are also applied, delivering a rich selection of vibrant piano tones with breathtaking realism and authenticity.

### Internal Song recorder, Built-in Lesson Function

The CA13 digital piano features a three song recorder, allowing performances to be recorded to internal memory and played back at the touch of a button. In addition, the convenient lesson feature allows aspiring pianists to learn the piano using a built-in collection of etudes from Czerny and Burgmüller, or songs from the popular *Alfred* course books. The left and right hand parts for each piece can be practiced separately, while adjusting the tempo allows more difficult passages to be perfected.

# Important Safety Instructions

## SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS



### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**AVIS : RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR.**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

### Examples of Picture Symbols



denotes that care should be taken.  
The example instructs the user to take care not to allow fingers to be trapped.




denotes a prohibited operation.  
The example instructs that disassembly of the product is prohibited.



denotes an operation that should be carried out.  
The example instructs the user to remove the power cord plug from the AC outlet.

### Read all the instructions before using the product.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or object have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**WARNING - When using electric products, basic precautions should always be followed, including the following.**



## WARNING

Indicates a potential hazard that could result in death or serious injury if the product is handled incorrectly.

**The product should be connected to an AC outlet of the specified voltage.**




- If you are going to use an AC power cord, make sure that its has the correct plug shape and conforms to the specified power voltage.
- Failure to do so may result in fire.

**Do not insert or disconnect the power cord plug with wet hands.**



Doing so may cause electric shock.

**Take care not to allow any foreign matter to enter the product.**

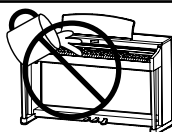


Entry of water, needles or hair pins may result in breakdown or short-circuit. The product shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the product.

**The chair must be used properly (it must be used only when playing the product).**

- Do not play with it or stand on it.
- Only one person is allowed to sit on it.
- Do not sit on it when opening the lid.
- Re-tighten the bolts occasionally.


Doing so may cause the chair to fall over or your fingers to be trapped, resulting in injury.

**When using the headphones, do not listen for long periods of time at high volume levels.**




Doing so may result in hearing problems.

**Do not lean against the keyboard.**

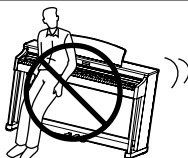


Doing so may cause the product to fall over, resulting in injury.

**Do not disassemble, repair or modify the product.**

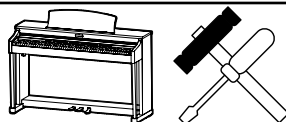

Doing so may result in product breakdown, electric shock or short-circuit.

**When disconnecting the AC power cord's plug, always hold the plug and pull it to remove it.**




- Pulling the AC power cord itself may damage the cord, causing a fire, electric shock or short-circuit.

**The product is not completely disconnected from the power supply even when the power switch is turned off. If the product will not be used for a long time, unplug the AC power cord from the AC outlet.**



- Failure to do so may cause fire in case of lightning.
- Failure to do so may over-heat the product, resulting in fire.

**This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.**

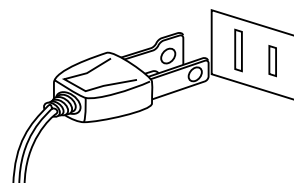

**It is a good practice to have the instrument near the AC outlet and the power cord plug in a position so that it can readily be disconnected in an emergency because electricity is always charging while the plug is in the AC outlet even in a power switch off condition.**



## CAUTION

Indicates a potential hazard that could result in injury or damage to the product or other property if the product is handled incorrectly.

**Do not use the product in the following areas.**

- Areas, such as those near windows, where the product is exposed to direct sunlight
- Extremely hot areas, such as near a heater
- Extremely cold areas, such as outside
- Extremely humid areas
- Areas where a large amount of sand or dust is present
- Areas where the product is exposed to excessive vibrations


Using the product in such areas may result in product breakdown. Use the product only in moderate climates (not in tropical climates).

**When you close the keyboard cover, close it gently.**




Closing it roughly may trap your fingers, resulting in injury.

**Before connecting cords, make sure that the power to this product and other devices is turned OFF.**

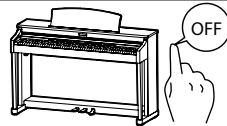


Failure to do so may cause breakdown of this product and other devices.

**Do not drag the product on the floor. Take care not to drop the product.**

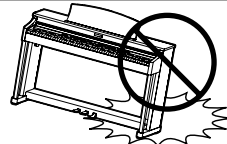

Please lift up the product when moving it. Please note that the product is heavy and must be carried by more than two persons. Dropping the product may result in breakdown.

**Do not place the product near electrical appliances such as TVs and radios.**

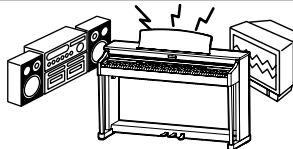

- Doing so may cause the product to generate noise.
- If the product generates noise, move the product sufficiently away from the electrical appliance or connect it to another AC outlet.

**When connecting the AC power cord and other cords, take care not to get them tangled.**



Failure to do so may damage them, resulting in fire, electric shock or short-circuit.

**Do not wipe the product with benzene or thinner.**




- Doing so may result in discoloration or deformation of the product.
- When cleaning the product, put a soft cloth in lukewarm water, squeeze it well, then wipe the product.

**Do not stand on the product or exert excessive force.**




- Doing so may cause the product to become deformed or fall over, resulting in breakdown or injury.

**Do not place naked flame, such as lighted candles on the product.**

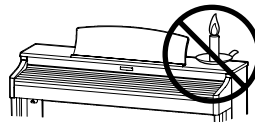

Doing so may cause the illumination to fall over, resulting in fire.

**Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.**

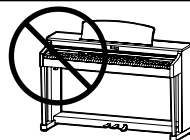

Failure to do so may over-heat the product, resulting in fire.

**The product should be located so that its location or position does not interfere with its proper ventilation. Ensure a minimum distance of 5cm around the product for sufficient ventilation.**

**The product should be serviced by qualified service personnel when:**

- The power supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the product.
- The product has been exposed to rain.
- The product does not appear to operate normally or exhibits a marked change in performance.
- The product has been dropped, or the enclosure damaged.

**Notes on Repair**

Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power cord plug, and then contact the shop from which the product was purchased.

**CAUTION:**

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:**

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**Instruction for AC power cord (U.K.)**

Do not plug either terminal of the power cord to the ground of the AC outlet on the wall.

**Canadian Radio Interference Regulations**

This instrument complies with the limits for a class B digital apparatus, pursuant to the Radio Interference Regulations, C.R.C., c. 1374.



**An information on Disposal for users**

If your product is marked with this recycling symbol it means that, at the end of its life, you must dispose of it separately by taking it to an appropriate collection point.

You should not mix it with general household waste. Disposing of this product correctly will prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

For further details, please contact your local authority.  
(European Union only)

**FCC Information (U.S.A)**

**CAUTION :** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





# Table of Contents

Preface .....	3
Important Safety Instructions .....	4
Table of Contents .....	9

## Preparation Before Use

Part Names and Functions .....	10
Setting Up the Piano .....	11

## Playing the Piano

Selecting Sounds .....	12
Using the Pedals .....	13
Dual Mode .....	14
Four Hands Mode .....	15
Metronome .....	16

## Internal Songs

Demo Songs and Piano Music Pieces .....	17
Lesson Function .....	18
1. Selecting a lesson book/song .....	18
2. Listening to the selected lesson song .....	19
3. Practicing left and right-hand parts separately ..	20

## Recorder

Recorder .....	21
1. Recording a song .....	21
2. Playing back a song .....	22
3. Erasing recorded songs .....	22

## Settings


Keyboard and Sound Settings .....	23
1. Touch .....	24
2. Transpose .....	25
3. Tuning .....	26
4. Reverb .....	27
5. Damper Resonance .....	28
6. Brilliance .....	29

MIDI Settings .....	30
MIDI Overview .....	30
1. MIDI Channel .....	32
2. Local Control .....	33
3. Multi-timbral Mode .....	34
4. Transmit Program Change Numbers .....	35

## Appendix

Connecting to Other Devices .....	36
Troubleshooting .....	37
Assembly Instructions .....	38
Demo and Piano Music Song Lists .....	40
Lesson Function Song Lists .....	42
Specifications .....	44
MIDI Implementation Chart .....	45
Notes .....	46
Operation Guide .....	49

# Part Names and Functions

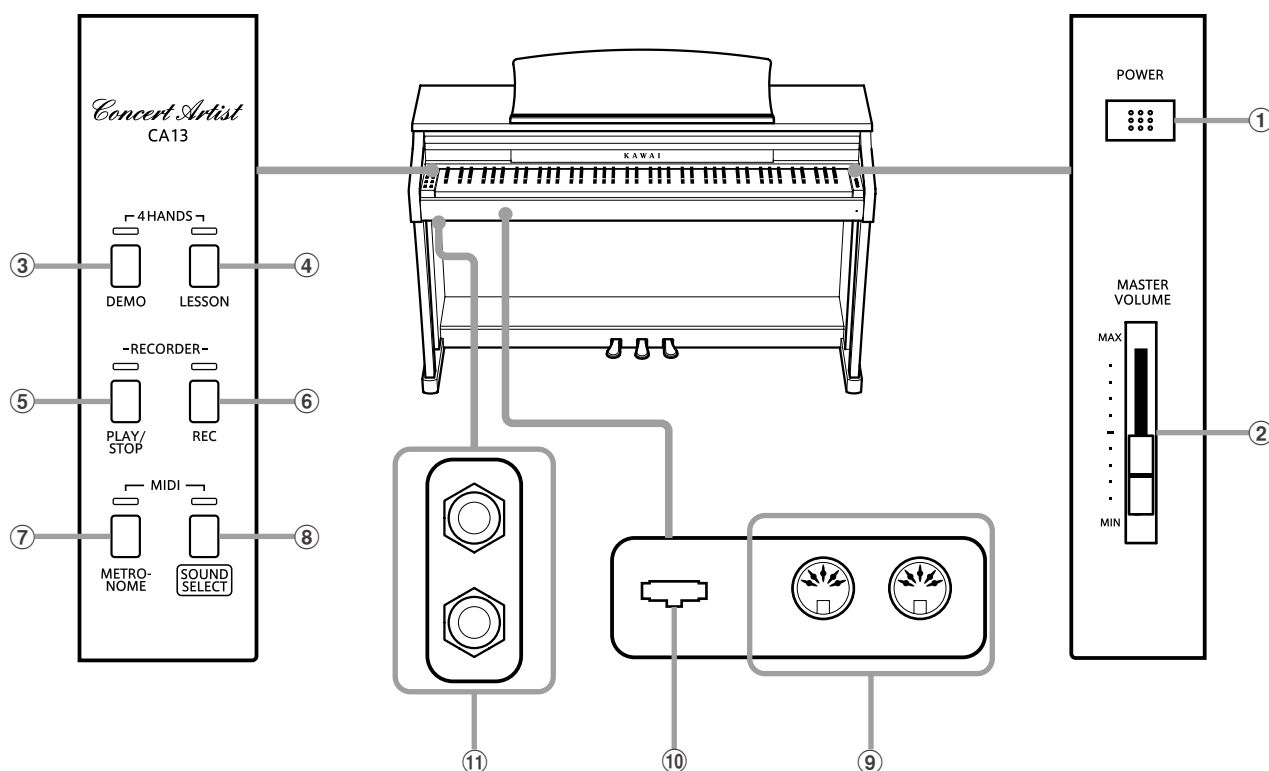

## ① POWER switch

This switch is used to turn the CA13 digital piano on/off. Be sure to turn off the instrument after playing.

## ② MASTER VOLUME slider

This slider controls the master volume level of the CA13 digital piano's built-in speakers or headphones, if connected.

## ③ DEMO button

This button is used to start/stop playback of the CA13 digital piano's built-in Demonstration songs and Piano Music pieces.

## ④ LESSON button

This button is used to select the CA13 digital piano's built-in Lesson songs.

## ⑤ PLAY / STOP button

This button is used to start/stop the playback of Recorder songs stored in memory and CA13 digital piano's built-in Lessons songs.

## ⑥ REC button

This button is used to record performances to the CA13 digital piano's internal memory.

## ⑦ METRONOME button

This button is used to turn the metronome function on/off, and also to adjust its tempo, time signature, and volume settings.

## ⑧ SOUND SELECT button

This button is used to select the sound(s) that will be heard when the keys are pressed.

## ⑨ MIDI IN / OUT jacks

These jacks are used to connect the CA13 digital piano to external MIDI devices, such as other musical instruments or a computer, in order to send and receive MIDI data.

## ⑩ PEDAL connector

This connector is used to connect the CA13 digital piano's pedal board to the instrument.

## ⑪ PHONES jacks

These jacks are used to connect stereo headphones to the CA13 digital piano. Two pairs of headphones can be connected and used simultaneously.


## ■ Operation Guide

The separate Operation Guide provides a convenient overview of the CA13 digital piano's various button and keyboard controls. This sheet is also reprinted in the Appendix section of this owner's manual.

# Setting Up the Piano


## 1. Connecting the power adaptor

Connect the AC power adaptor to the 'DC IN' inlet located on the underside of the instrument, as indicated below.

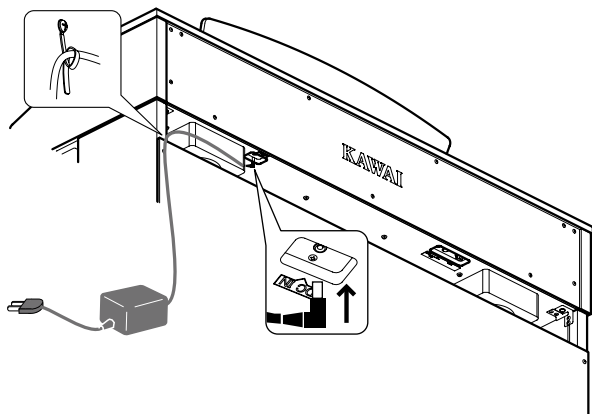


## 2. Connecting the power adaptor to an outlet

Connect the AC power adaptor to an AC outlet.

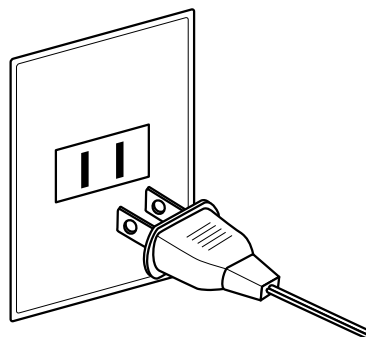

## 3. Turning on the power


Press the POWER switch, located on the right hand side of the instrument's front panel.

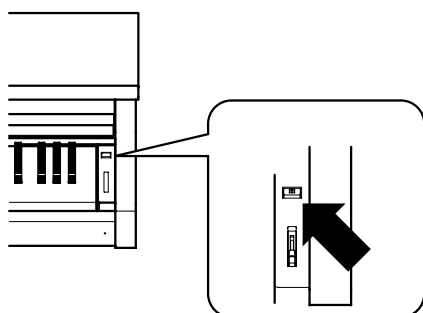

The LED indicator for the SOUND SELECT button will turn on and the Concert Grand sound will be selected automatically.

## ■ Using headphones

Use the jacks located beneath the keyboard on the left hand side, to connect stereo headphones to the CA13 digital piano.

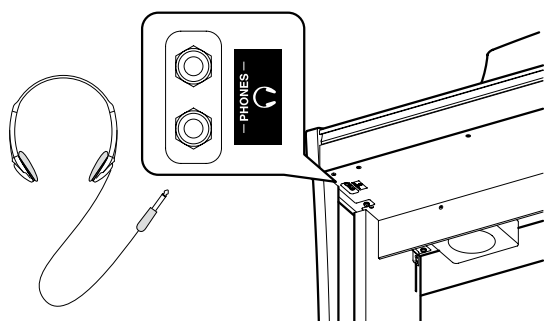


When a pair of headphones is connected, sound will not be produced by the speakers. Up to two pairs of headphones can be connected and used simultaneously.

## 4. Adjusting the volume


Move the MASTER VOLUME slider up and down to increase and decrease the volume level of the instrument's speakers, or headphones if connected.

Adjust the volume to a comfortable listening level - the middle is often a good starting point.

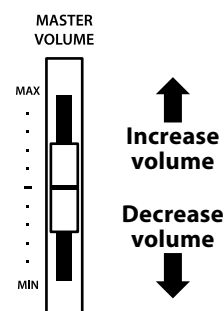

## ■ Adjusting the pedal support bolt

A pedal support bolt is attached at the base of the pedal board to aid stability when the pedals are pushed. Turn the bolt anti-clockwise until it makes contact with the floor and supports the pedals firmly.

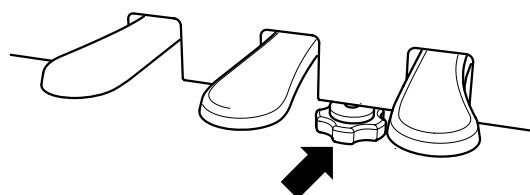

**When moving the instrument, always adjust or remove the pedal support bolt, then readjust when the instrument is in its new position.**

# Selecting Sounds


The CA13 digital piano features 8 different instrument sounds, which can be selected in one of two ways. By default the 'Concert Grand' sound will be selected automatically when the instrument is turned on.

## Instrument Sounds

Sound name	Description
Concert Grand	A concert grand piano with a rich, expansive tone.
Concert Grand 2	A concert grand piano with a refined, clear tone.
Studio Grand	A grand piano with a brightly voiced tone.
Modern Piano	A modern grand piano with clean, distinctive tone.
Slow Strings	A string ensemble with a slow, gradual attack.
Classic E.Piano	A vintage electric piano.
Church Organ	A traditional pipe organ.
Harpsichord	A baroque period plucked instrument.

## Selecting a sound: Method 1


Press the SOUND SELECT button repeatedly to cycle through the 8 available instrument sounds.

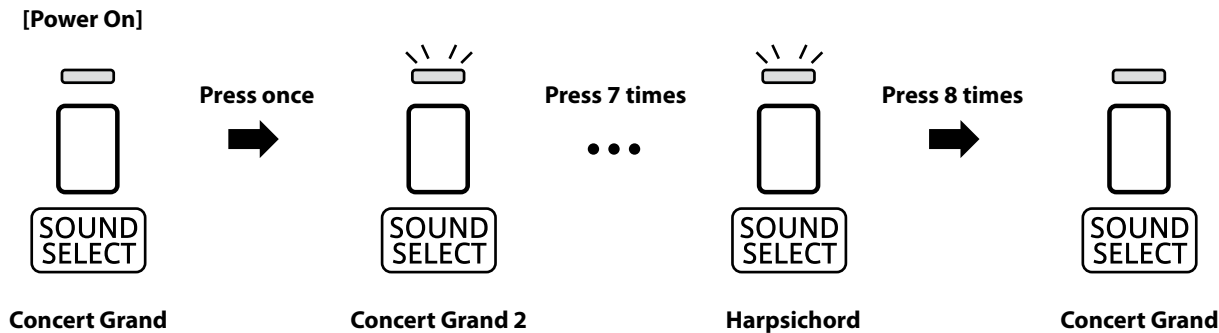

\* When the Concert Grand sound is selected the LED indicator for the SOUND SELECT button will turn on.  
When a sound other than Concert Grand is selected the LED indicator for the SOUND SELECT button will start to flash.


## Selecting a sound: Method 2

Press and hold the SOUND SELECT button, then press one of the lowest eight white keys to selected the desired instrument sound.

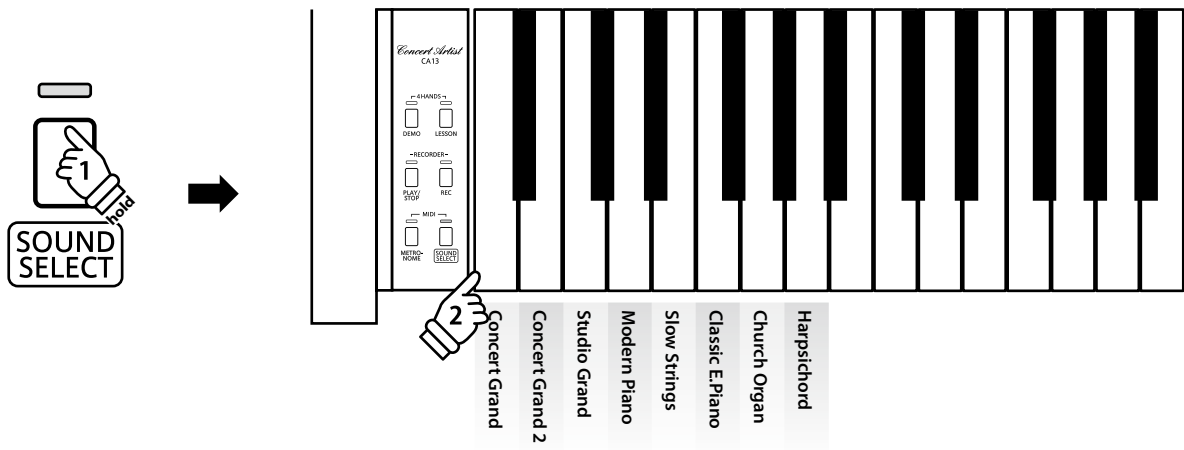

# Using the Pedals

As with a grand piano, the CA13 digital piano features three pedals: sustain, sostenuto, and soft.

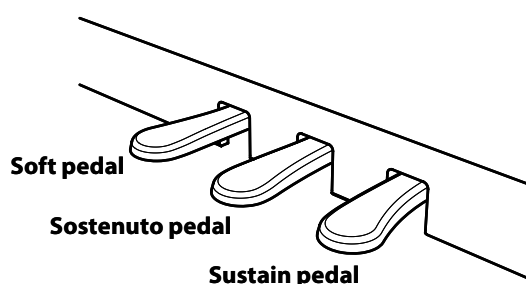

## ■ Sustain pedal (right pedal)

Depressing this pedal sustains the sound after one's hands have been lifted from the keyboard - greatly enriching the piano sound, while also assisting smooth 'legato' passages.

The sustain pedal is capable of responding to half pedaling.

## ■ Soft pedal (left pedal)

Depressing this pedal softens the sound, reducing its volume.

When the rotary speaker effect is selected, the soft pedal is also used to alternate the speed of the rotary simulation between 'Slow' and 'Fast' effect modes.

## ■ Sostenuto pedal (centre pedal)


Depressing this pedal after playing the keyboard and before releasing the keys, sustains the sound of only those notes that have been played. Any keys that are subsequently played after the sostenuto pedal is depressed will not be sustained.

## ■ Pedal support bolt

If the pedal support bolt does not make contact with the floor, the pedal board may become damaged. Ensure that this bolt is fully extended and supports the pedals firmly.



**When moving the instrument, always adjust or remove the pedal support bolt, then readjust when the instrument is in its new position.**

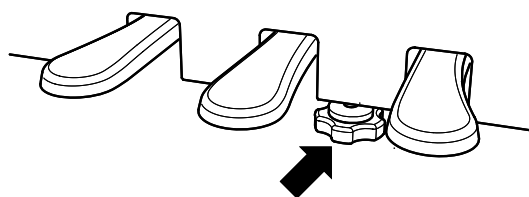

## ■ Caring for the pedals

If the surface of the pedals becomes dirty, clean the pedals using a dry dish-washing sponge. Do not attempt to clean the pedals using rust-removing solvents, abrasives or files.


# Dual Mode

The Dual Mode function allows two sounds to be layered together, creating a more complex sound. For example, a piano sound layered with strings, or an electric piano combined with a harpsichord, etc.

## ■ Enabling Dual Mode

Press and hold the SOUND SELECT button, then press two of the lowest eight keys simultaneously.

The sounds corresponding to the two keys will be layered together.

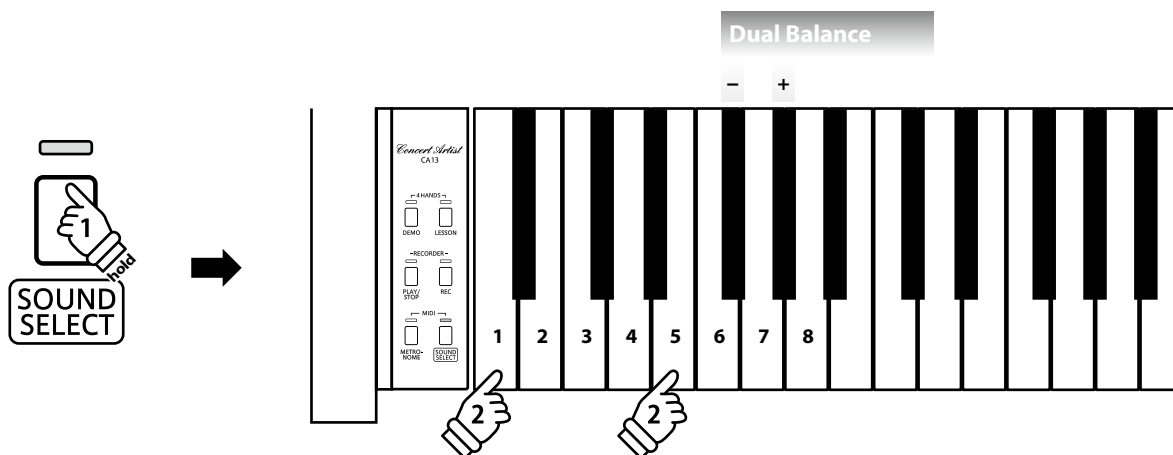

## ■ Adjusting the volume balance

Press and hold the SOUND SELECT button, then press the F# or G# keys repeatedly to decrease or increase the volume balance between the two sounds.

## ■ Exiting Dual Mode

Press the SOUND SELECT button.

The Concert Grand sound will be selected automatically and the instrument will return to normal operation.

# Four Hands Mode


The Four Hands Mode function divides the keyboard into two sections, with the sustain (right) and soft (left) pedal acting as independent sustain pedals for each section. The octave/pitch of each section is also adjusted, allowing two people to perform piano duets within the same key range using a single instrument.

## ■ Enabling Four Hands Mode

Press the DEMO and LESSON buttons simultaneously.

The LED indicators for the DEMO and LESSON buttons will start to flash, indicating that Four Hands Mode is enabled.

\* The selected keyboard sound can still be changed when Four Hands Mode is enabled.

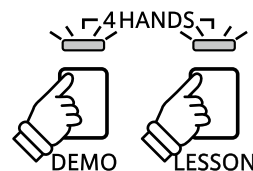



## ■ Changing the split point

The keyboard length for each section can be freely adjusted.

Press and hold the DEMO and LESSON buttons simultaneously, then press a key on the keyboard so set the new split point.

The pressed key will become the new split point.

\* The default split point is set between keys B2 and C3.

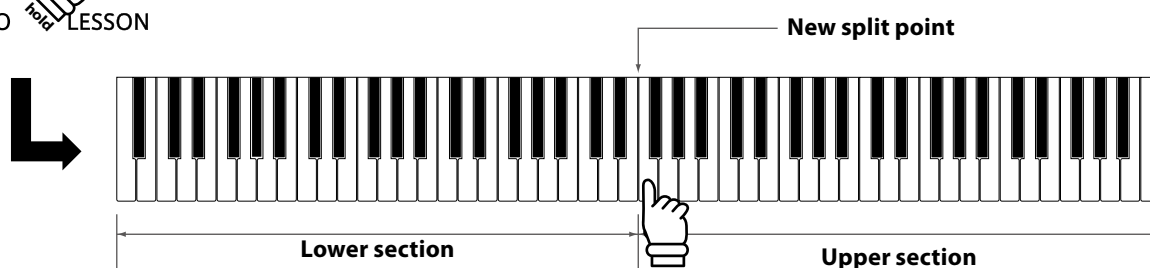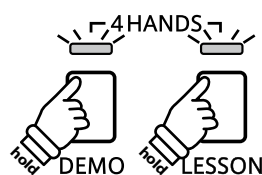

## ■ Exiting Four Hands Mode

Press either the DEMO or LESSON button.

The instrument will return to normal operation.


# Playing the Piano

## ■ Turning the metronome on/off

Press the METRONOME button again to stop the metronome.



\* The - / + keys can also be used to decrease or increase the metronome volume within the range of 1-10.

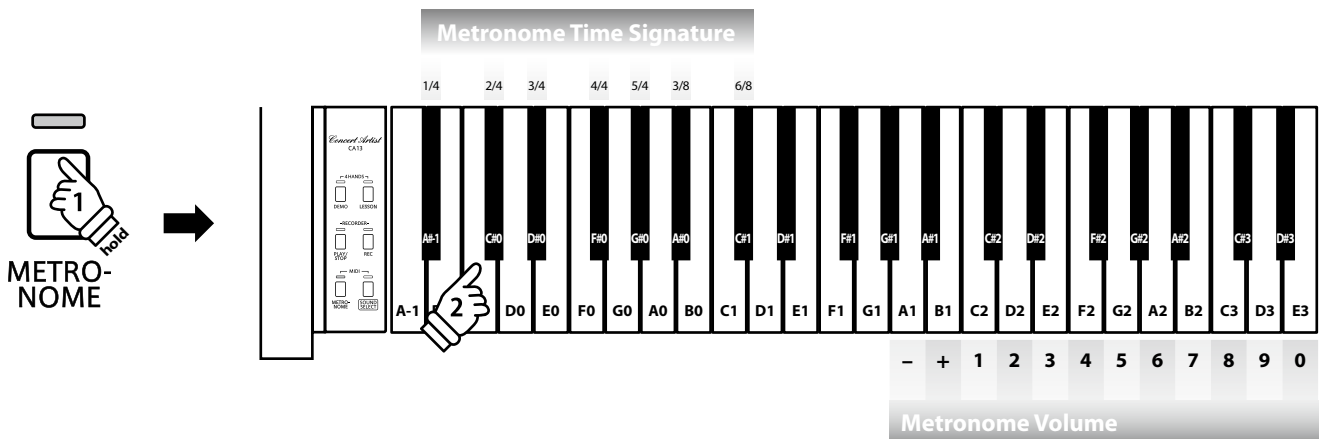

**METRONOME**

1. Press the **M** button.

2. Press the **T** button.

The diagram shows the **Concert Artist CA-13** metronome with various buttons and a display showing **A-1**.

While pressing the METRONOME button, press the - / + keys repeatedly to gradually decrease or increase the tempo in 2 bpm increments.



# Demo Songs and Piano Music Pieces

The CA13 digital piano includes a selection of demonstration songs to introduce each internal sound.

## ■ Demo songs

Sound name	Song name	Composer
Concert Grand	Original	Kawai
Concert Grand 2	Valse Petit Chien	Chopin
Studio Grand	Original	Kawai
Modern Piano	Original	Kawai
Slow Strings	Original	Kawai
Classic E.Piano	Original	Kawai
Church Organ	Chorale Prelude "Wachet auf, ruft uns die Stimme"	Bach
Harpsichord	French Suite No.6	Bach

\* Kawai regret that sheet music for Kawai original demo songs is not available.

In addition to the sound demonstration songs, the CA13 digital piano also features a selection of popular classical piano works from the Baroque and Romantic periods. Notated scores are provided in the separate 'Classical Piano Collection' book\*, assisting the musical appreciation and study of each piece.

\* Depending on market area.

For a complete listing of demo songs and piano music pieces, please refer to page 40 of this owner's manual.

## 1. Playing the demo songs

Press the DEMO button.

The LED indicator for the DEMO button will start to flash and the Concert Grand demo song will start to play.

\* When the Concert Grand demo song has finished, another demo song will be selected at random. This process will continue until all of the demo songs have been played.


Press the DEMO button again to stop the demo.



## 2. Selecting a demo song / piano music piece

While the demo is playing:

Press and hold the DEMO button, then press the white key assigned to the desired demo song or piano music piece.

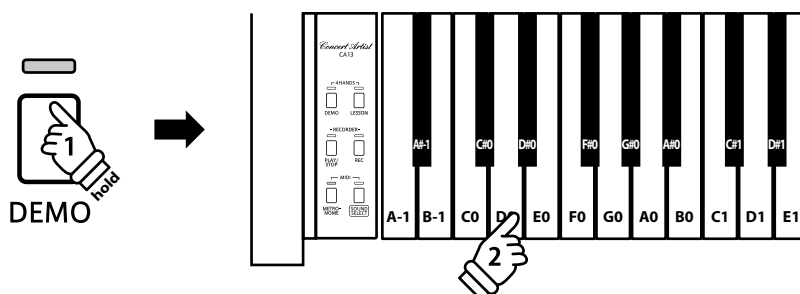

# Lesson Function

The Lesson function allows budding pianists to practice the piano using a selection of built-in song books. The left and right hand parts for each piece can be practiced separately, while adjusting the tempo allows difficult passages to be perfected.

For a complete listing of available Lesson Function songs, please refer to page 42 of this owner's manual.

## ■ Built-in lesson function song books

	US, Canada, UK, Australasia	Rest of the World
Book 1	Alfred's Basic Piano Library Lesson Book Level 1A	Burgmüller 25 (25 Etudes Faciles, Opus 100)
Book 2	Alfred's Basic Piano Library Lesson Book Level 1B	Czerny 30 (Etudes de Mécanisme, Opus 849)

\* Lesson books sold separately - please refer to page 43 of this owner's manual for more information.

## 1 Selecting a lesson book/song

### ■ Entering lesson mode

Press the LESSON button.

The LED indicator for the LESSON button will turn on, indicating that lesson mode is enabled, and the Concert Grand sound will be selected automatically.



### ■ Selecting a lesson song from Book 1

While lesson mode is selected:



Press and hold the LESSON button, then press the white key assigned to the desired lesson song.

### ■ Selecting a lesson song from Book 2



While lesson mode is selected:

Press and hold the LESSON button, then press the left-most black key (A#-1), and finally press the white key assigned to the desired lesson song.

**Book 1:**  
Song no. 5

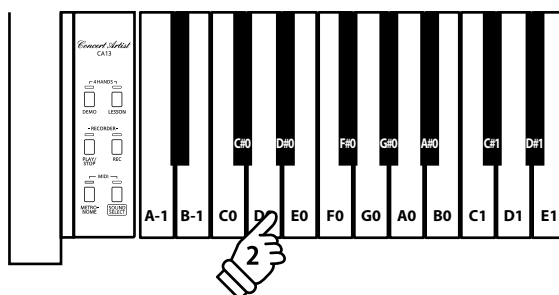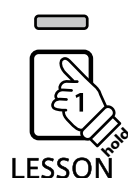

**Book 2:**  
Song no. 10

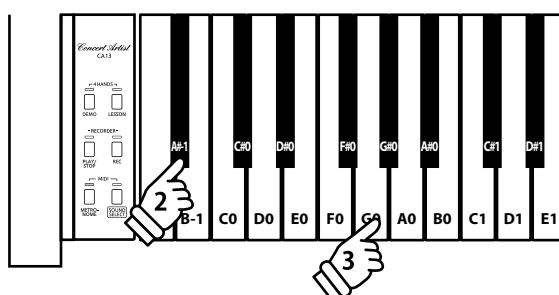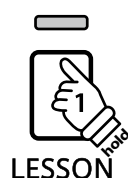

## 2 Listening to the selected lesson song

This page will explain how to play and stop the selected lesson song, and adjust the tempo.

### ■ Playing the lesson song

After selecting a lesson book and song:

Press the PLAY/STOP button.

The LED indicator for the PLAY/STOP button will turn on, and a one bar count-in will be heard before the song starts to play.



While the lesson song is playing, press the METRONOME button to turn the metronome on/off.

\* The metronome time signature and tempo will automatically be set to that of the currently selected lesson song.




### ■ Adjusting tempo of the lesson song

While the lesson song is playing:

Press and hold the METRONOME button, enter the desired tempo using the lowest 12 white keys marked below, then release the METRONOME button.

\* The lesson song tempo can be adjusted within the range of 10-300 bpm.

\* The lesson song tempo can be entered precisely, or decreased and increased gradually.

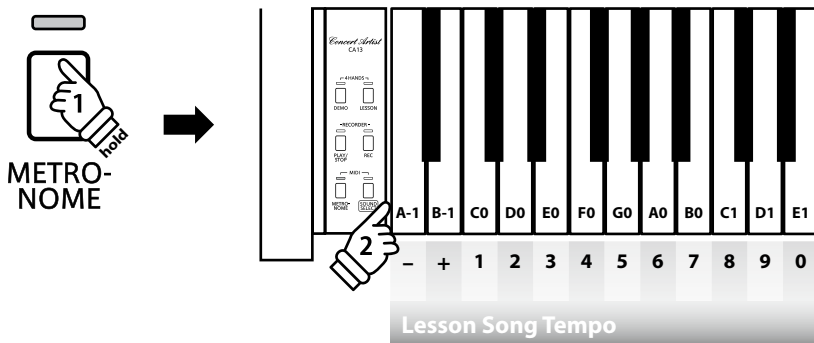

#### Method 1:

While pressing the METRONOME button, press keys 1, 5, and 0 to set the tempo to 150 bpm, or keys 8 and 5 to set the tempo to 85 bpm.

#### Method 2:

While pressing the METRONOME button, press the - / + keys repeatedly to gradually decrease or increase the tempo in 2 bpm increments.

### ■ Stopping and resuming the lesson song

While the lesson song is playing:

Press the PLAY/STOP button again to stop the lesson song.

Press the PLAY/STOP button once again.

A one bar count-in will be heard before the lesson song resumes playback from the previous position.



To reset the playing position of the lesson song, press and hold the PLAY/STOP button for two seconds, or simply re-select the same song.

### 3 Practicing left and right-hand parts separately

This page will explain how to mute/activate the left and right-hand parts of the selected lesson song, allowing each part to be practiced separately.

The LED indicators for the METRONOME and SOUND SELECT buttons are used to indicate which part (left or right-hand) of the selected lesson song is muted/active.

METRONOME button LED	SOUND SELECT button LED	Lesson song playback
On	On	Left and Right-hand parts (default playing mode)
On	Off	Left-hand part only
Off	On	Right-hand part only

#### Muting/activating lesson song parts

After selecting a lesson book and song:

Press the SOUND SELECT button.

The LED indicator for the SOUND SELECT button will turn off (the LED indicator for the METRONOME button will remain turned on), indicating that only the left-hand part of the lesson song is active (i.e. the right-hand part will be muted).


Press the SOUND SELECT button again.

The LED indicator for the SOUND SELECT button will turn on and the LED indicator for the METRONOME button will turn off, indicating that only the right-hand part of the lesson song is active (i.e. the left-hand part will be muted).


Press the SOUND SELECT button once again.

The LED indicator for the SOUND SELECT button will remain turned on and the LED indicator for the METRONOME button will also turn on, indicating that both the left and right-hand parts of the lesson song are active.


Press once:  
Left-hand only

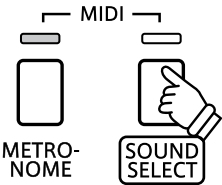

Press twice:  
Right-hand only

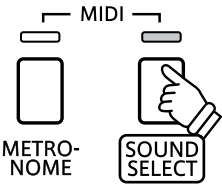

Press 3 times:  
Left and Right-hand

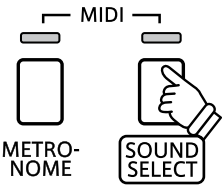

#### Exiting lesson mode

Press the LESSON button.

The LED indicator for the LESSON button will turn off, and the instrument will return to normal operation.



# Recorder

The CA13 digital piano allows up to 3 different songs to be recorded, stored in internal memory, and played back at the touch of a button.

## 1 Recording a song

### 1. Entering song recorder mode

Press the REC button.


The LED indicator for the REC button will start to flash, to indicate that the piano is in recording standby mode.



### 2. Selecting a song memory

Press and hold the REC button, then press one of the lowest three white keys to select the desired song memory.

\* Selecting a song memory that has already been used to record a song will automatically erase the previously recorded song.

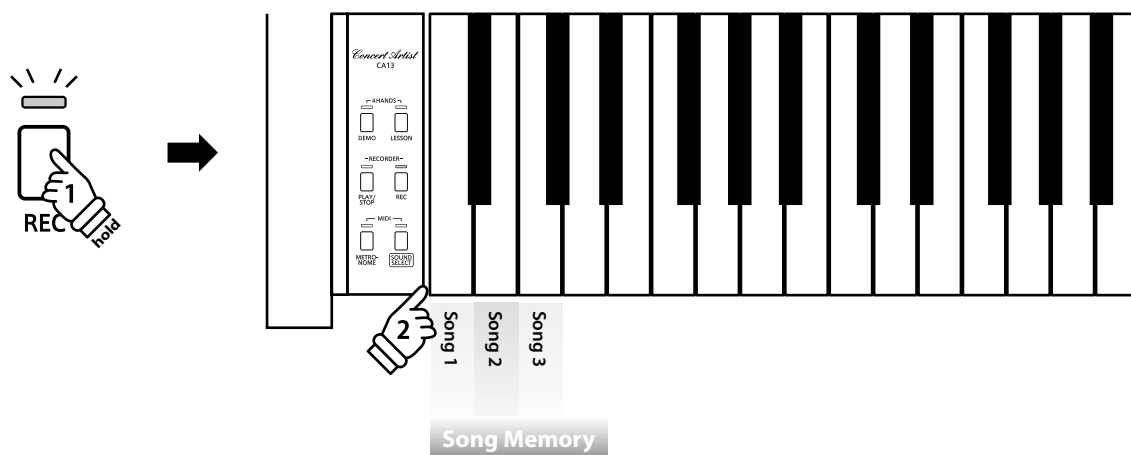


### 3. Starting the song recorder

Press a key on the keyboard.

The LED indicators for the REC and PLAY/STOP buttons will turn on, and recording will start.

\* Recording can also be started by pressing the PLAY/STOP button, allowing a rest period or empty bar to be inserted at the beginning of the song.

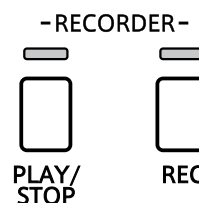

### 4. Stopping the song recorder

Press the PLAY/STOP button.

The LED indicators for the PLAY/STOP and REC buttons will flash briefly, and the song will be stored in internal memory.

\* Do not turn the power off while the song is saving to memory.

\* The maximum recording capacity is approximately 15,000 notes, with button and pedal presses also counted as one note. If the maximum recording capacity is reached during recording, the recorder will stop automatically.

\* Recorder songs will remain in memory after the power is turned off.

## 2 Playing back a song

### 1. Playing the recorded song

Press the PLAY/STOP button.


The LED indicator for the PLAY/STOP button will turn on, and the recorded song will start to play.



### 2. Playing a song stored in another memory

Press and hold the PLAY/STOP button, then press one of the lowest three white keys to play the desired song memory.

\* The selected song will start to play when the PLAY/STOP button is released.

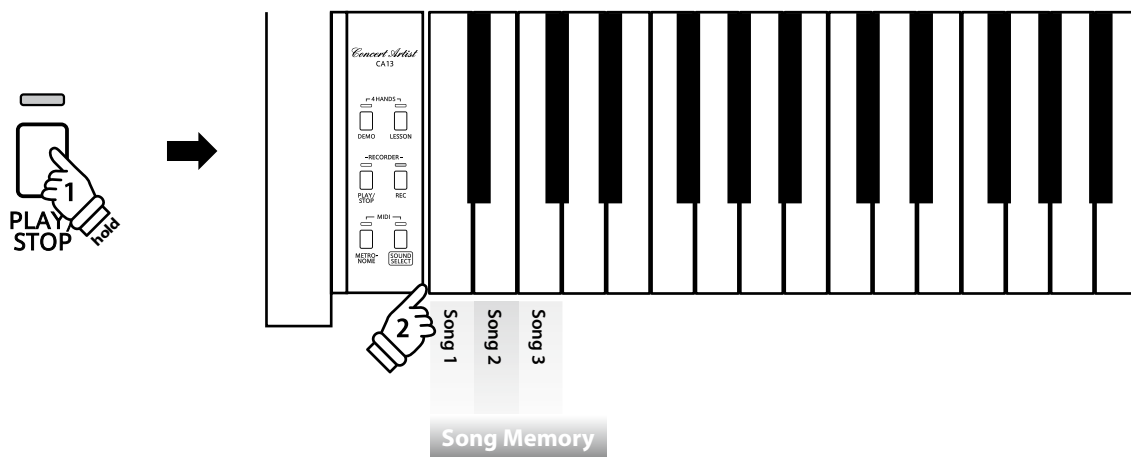

## 3 Erasing recorded songs




**Warning:** This process will erase all three songs stored in internal memory, and cannot be undone.

### ■ Erasing the recorder songs

Press and hold the PLAY/STOP and REC buttons simultaneously, then turn the instrument's power off/on.

All recorder songs stored in memory will be erased.

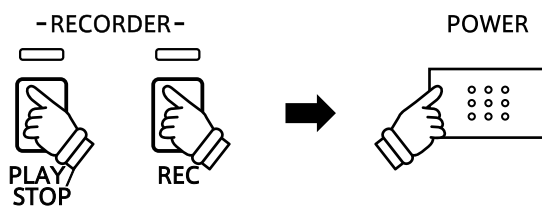

# Keyboard and Sound Settings


The CA13's keyboard and sound settings allow various aspects of the instrument to be adjusted.

## ■ Keyboard and Sound Settings

Setting name	Explanation	Default setting
Touch	Change the touch sensitivity of the keyboard.	Normal
Transpose	Increase or decrease the pitch of the keyboard in semi-tone steps.	0
Tuning	Increase or decrease the pitch of the keyboard in 0.5 Hz steps.	A4 = 440.0 Hz
Reverb	Change the type of reverberation added to the sound.	Room
Damper Resonance	Adjust the resonance that is heard when depressing the damper pedal.	Medium
Brilliance	Adjust the brightness of the sound.	0

## ■ Changing settings

Press and hold the SOUND SELECT button, then press the key(s) assigned to the desired setting.

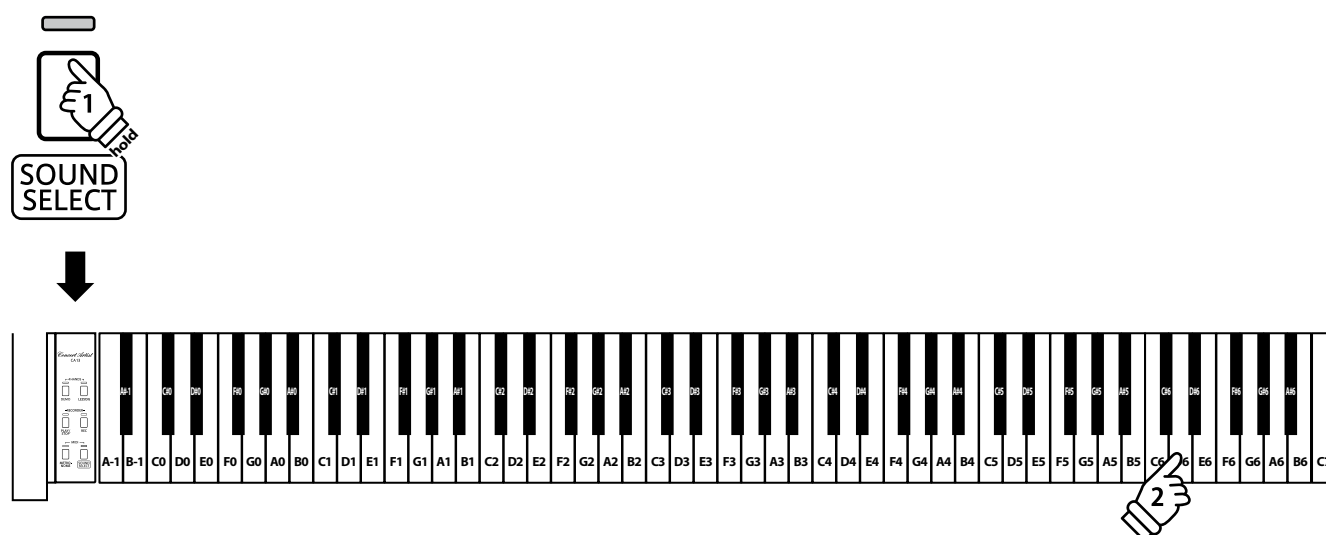

# 1 Touch

As with an acoustic piano, the CA13 digital piano produces a louder sound when the keys are struck with force, and a softer sound when the keys are played gently. The volume and tonal character change in relation to the strength and speed of playing - on a digital piano this system is referred to as 'touch sensitivity'.


The Touch setting allows the touch sensitivity of the keyboard to be conveniently adjusted. There are four different preset touch settings available.

## ■ Touch type

Touch type	Description	Key
Light	A louder volume is produced even when playing with a soft touch. This setting is recommended for children and organ players, or for those still developing finger strength.	G#3
Normal (default)	Reproduces the standard touch sensitivity of an acoustic piano.	F#3
Heavy	Requires a heavier touch to produce a loud volume. This setting is recommended to those with stronger fingers.	A#3
Off	A constant volume is produced regardless of how hard the keys are struck. This setting is recommended for sounds that have a fixed dynamic range such as organ and harpsichord.	C#3

## ■ Changing the Touch type

Press and hold the SOUND SELECT button, then press the key assigned to the desired touch type.

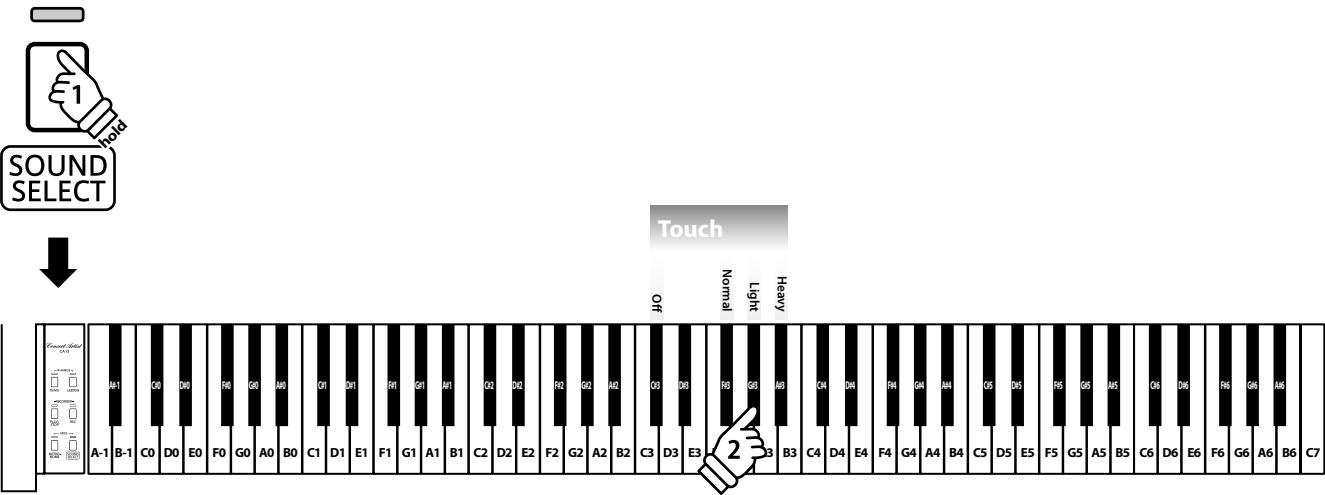



## 2 Transpose


The Key Transpose setting allows the pitch of the CA13 digital piano keyboard to be raised or lowered in semi-tone steps. This is particularly useful when accompanying instruments with different tones, or when a song learned in one key must be played in another key. When transposed, the song can be played in the original key, yet heard in a different key.

### ■ Adjusting the Transpose setting

Press and hold the SOUND SELECT button, then press the keys assigned -/+ to lower or raise the keyboard pitch in semi-tone steps.

\* The keyboard pitch can be raised or lowered by up to 12 semi-tones.

\* To disable/enable the transpose setting, press the key assigned to the 'off/on' function.

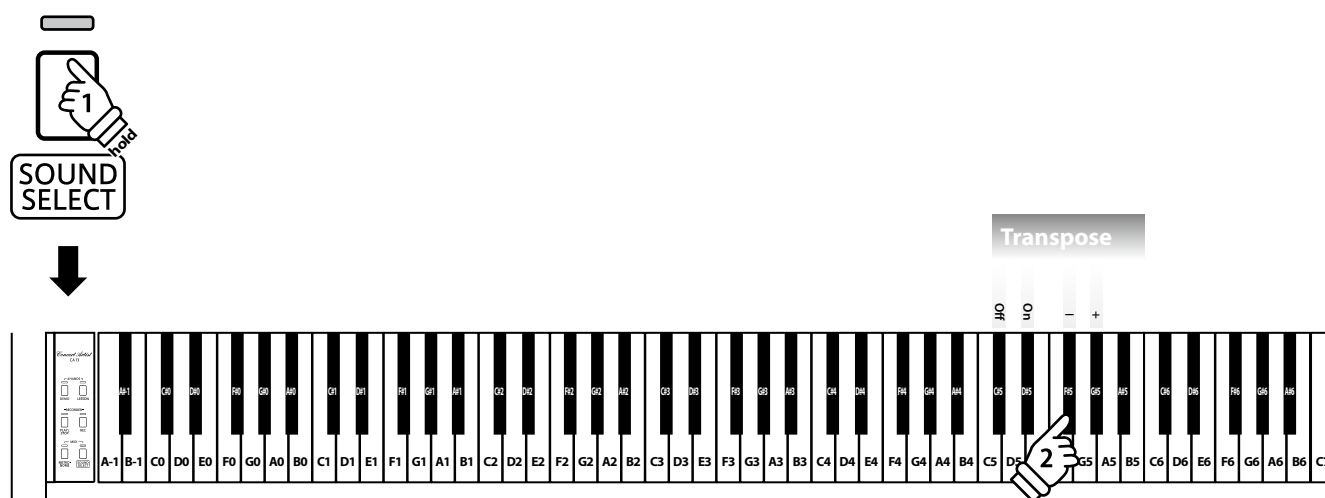

### 3 Tuning

The Tuning setting allows the overall pitch of the CA13 digital piano to be raised and lowered in 0.5 Hz steps, and may therefore prove useful when playing with other instruments.

#### ■ Adjusting the Tuning setting: Method 1

Press and hold the SOUND SELECT button, then enter the desired pitch using the number keys indicated below.


- \* The keyboard pitch can be adjusted within the range of 427 - 453 Hz.
- \* To reset the pitch to A=440, press the Reset key indicated below.



**Example A=441.5 Hz**  
Enter 4, 4, 1, then press the + key.

#### ■ Adjusting the Tuning setting: Method 2

Press and hold the SOUND SELECT button, then press the keys assigned +/- to lower or raise the keyboard pitch in 0.5 Hz steps.

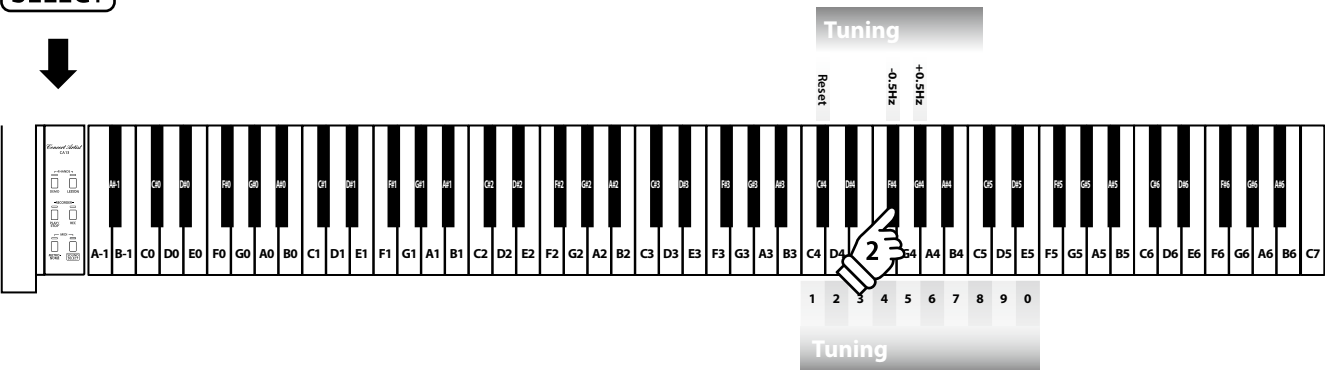

# 4 Reverb

The Reverb setting adds reverberation to the sound, simulating the acoustic environment of a recital room, stage, or concert hall. The most suitable reverb type is applied automatically when selecting each sound, however it is also possible to select a different reverb type manually if desired.


## ■ Reverb type

Reverb type	Description	Key
Room (default for Concert Grand)	Simulates the ambiance of a living room or small rehearsal room.	F#1
Stage	Simulates the ambiance of a small hall or live stage.	G#1
Hall	Simulates the ambiance of a concert hall or theater.	A#1
Off	Disables the reverb effect.	C#1
On	(Re)Enables the reverb effect.	D#1

## ■ Changing the Reverb type

Press and hold the SOUND SELECT button, then press the key assigned to the desired Reverb type.

- \* To disable/enable the reverb effect, press the key assigned to the 'off/on' function.
- \* If the reverb effect is disabled, it will be turned on automatically upon selecting a reverb type.

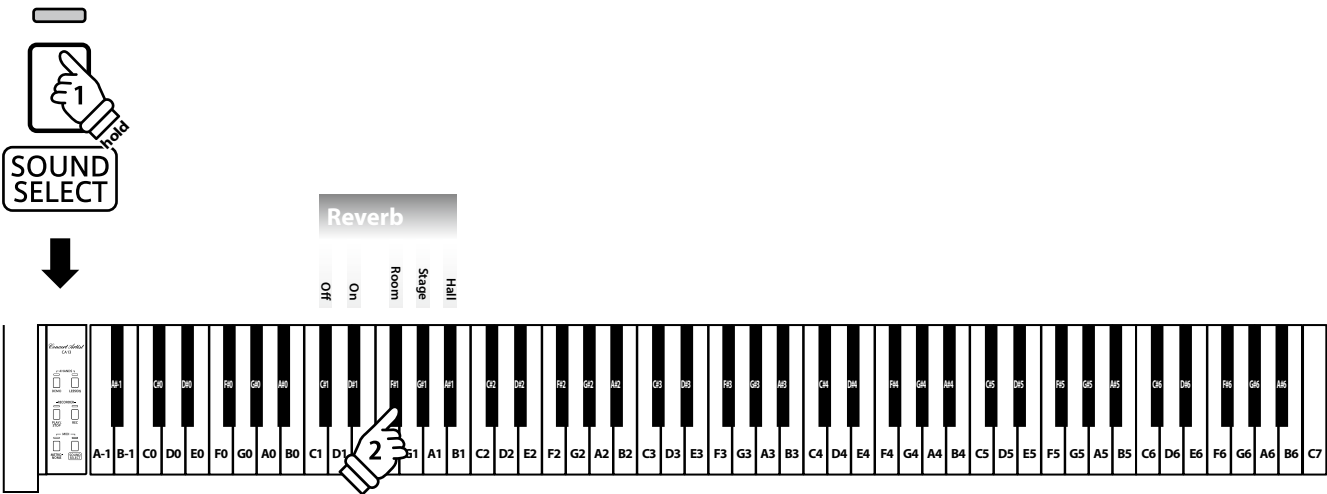

# 5 Damper Resonance

Depressing the sustain pedal of an acoustic piano raises all dampers, allowing the strings to vibrate freely. When a note or chord is played on the piano with the sustain pedal depressed, not only will the strings of the notes played vibrate, but also the strings of other notes, vibrating in sympathetic resonance.

The CA13 digital piano recreates this phenomenon, with the Damper Resonance setting allowing the volume of this resonance to be changed.

## ■ Damper Resonance

Sounds affected by Damper Resonance	Sounds NOT affected by Damper Resonance
Concert Grand	Modern Piano
Concert Grand 2	Slow Strings
Studio Grand	Classic E.Piano
	Church Organ
	Harpsichord

## ■ Damper Resonance type

Damper Resonance type	Description	Key
Small	Piano sounds produce a small amount of damper resonance.	F#2
Medium (default)	Piano sounds produce a medium amount of damper resonance.	G#2
Large	Piano sounds produce a large amount of damper resonance.	A#2
Off	Disables the damper resonance effect.	C#2
On	(Re)Enables the damper resonance effect.	D#2


## ■ Changing the Damper Resonance type

Press and hold the SOUND SELECT button, then press the key assigned to the desired Damper Resonance type.

\* To disable/enable the damper resonance effect, press the key assigned to the off/on function.

\* If the damper resonance effect is disabled, it will be turned on automatically upon selecting a damper resonance type.

Settings

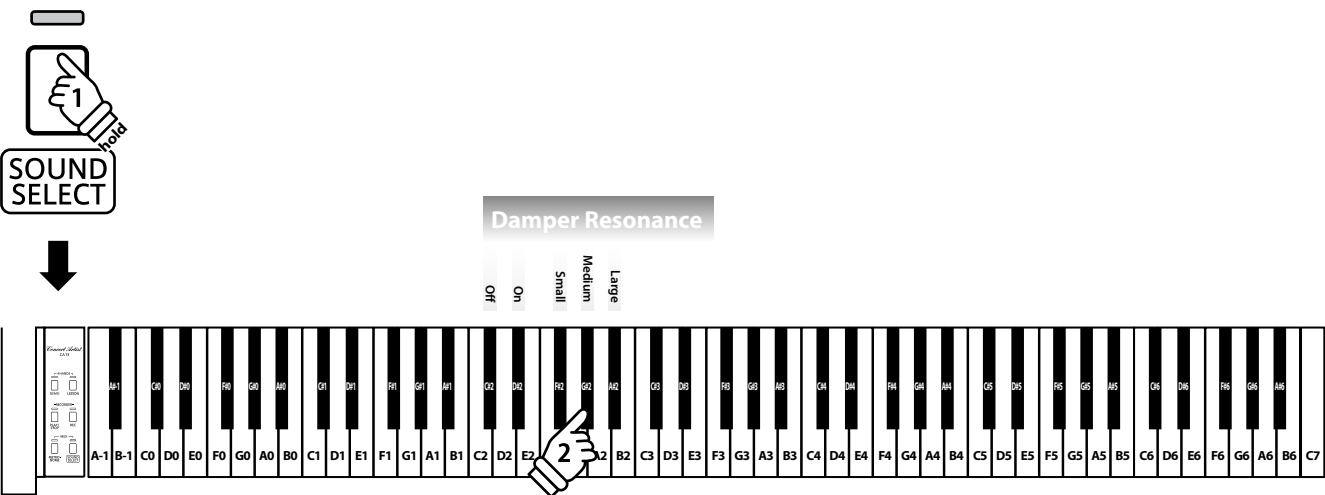

# 6 Brilliance


The Brilliance setting allows the brightness of the CA13 digital piano's sound to be adjusted.

## ■ Adjusting the Brilliance setting

Press and hold the SOUND SELECT button, then press the keys assigned -/+ repeatedly to adjust the brightness of the sound.

\* The Brilliance setting can be adjusted within the range of -10 - +10, with +10 being the brightest setting.

\* To disable the Brilliance effect, press the key assigned to the 'off' function.

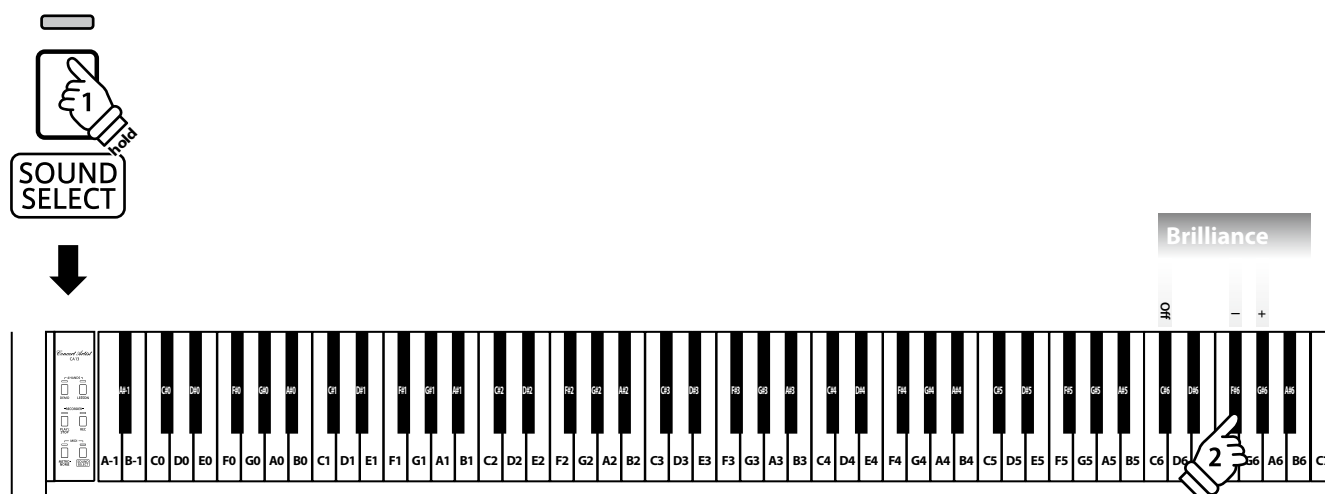

# MIDI Settings

The term MIDI is an acronym for Musical Instrument Digital Interface, an international standard for connecting musical instruments, computers, and other devices to allow the exchange of performance data.


## ■ MIDI terminals

MIDI terminal	Function
MIDI IN	Receiving note, program change, and other data.
MIDI OUT	Sending note, program change, and other data.

## ■ MIDI channels

MIDI uses channels to exchange data back and forth between MIDI devices. There are receive (MIDI IN) and transmit (MIDI OUT) channels. Most musical instruments or devices with MIDI functions are equipped with both MIDI IN and OUT jacks and are capable of transmitting and receiving data via MIDI. The receive channels are used to receive data from another MIDI device and the transmit channels are used to transmit data to another MIDI device.

The illustration below shows three musical instruments, connected together using MIDI.

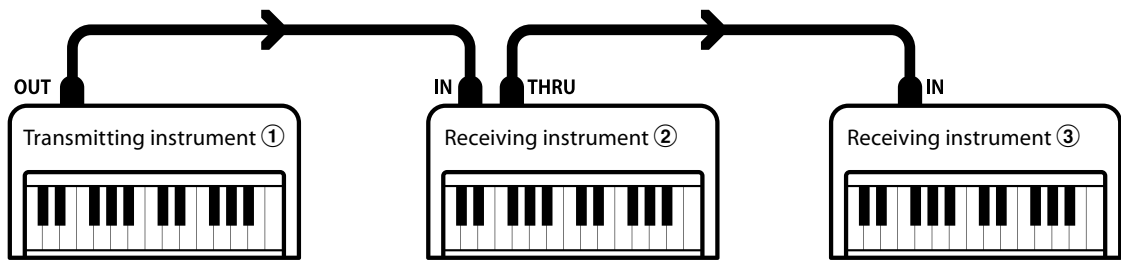


Transmitting instrument ① sends transmit channel and keyboard information to receiving instruments ②/③. The information arrives at the receiving instruments ②/③. Receiving instruments ②/③ will respond to MIDI data that is sent if their receive channel is the same as the transmit channel of the transmitting instrument ①. If the channels do not match, then the receiving instruments ②/③ will not respond to any data that is sent.

For both receiving and transmitting, channels 1-16 can be used.

## ■ Recording/playing with a sequencer

When connected to a sequencer, the CA13 digital piano can be used to record and playback multi-track songs, with separate sounds playing simultaneously on each channel.

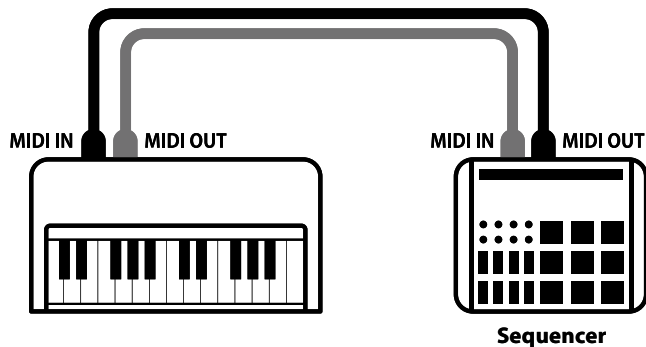

## MIDI functions

The CA13 digital piano supports the following MIDI functions:

<b>Transmit/receive note information</b>	<b>Transmit/receive Program Change number</b>
Transmit/receive note information from a MIDI-connected musical instrument or device.	Transmit/receive program change data to/from a MIDI-connected musical instrument or device.
<b>Transmit/receive channel settings</b>	<b>Transmit/receive pedal data</b>
Specify transmit/receive channels within the range of 1 to 16.	Transmit/receive sustain, sostenuto, and soft pedal data from a MIDI-connected musical instrument or device.
<b>Transmit/receive exclusive data</b>	<b>Receive volume data</b>
Transmit/receive front panel or menu function settings as exclusive data.	Receive MIDI volume data sent from a MIDI-connected musical instrument or device.
<b>Multi-timbral mode setting</b>	
Receive multiple channel MIDI data from a MIDI-connected musical instrument or device.	
* Multi-timbral mode setting must be enabled.	


\* Please refer to the 'MIDI Implementation Chart' on page 45 for further information regarding the MIDI capabilities of the CA13 digital piano.

## MIDI settings

Function name	Explanation	Default setting
MIDI Channel	Specify the channel used to transmit/receive MIDI information.	1ch
Local Control	Specify whether or not internal sounds will be heard when the keyboard is pressed.	On
Multi-timbral mode	Specify whether or not MIDI information can be received on more than one channel.	Off
Transmit Program Change Number	Specify whether or not program change information is sent when sounds are changed. Send a MIDI program change number from 1 to 128.	Off

## Changing MIDI settings

Press and hold the METRONOME and SOUND SELECT buttons, then press the key(s) assigned to the desired functions.

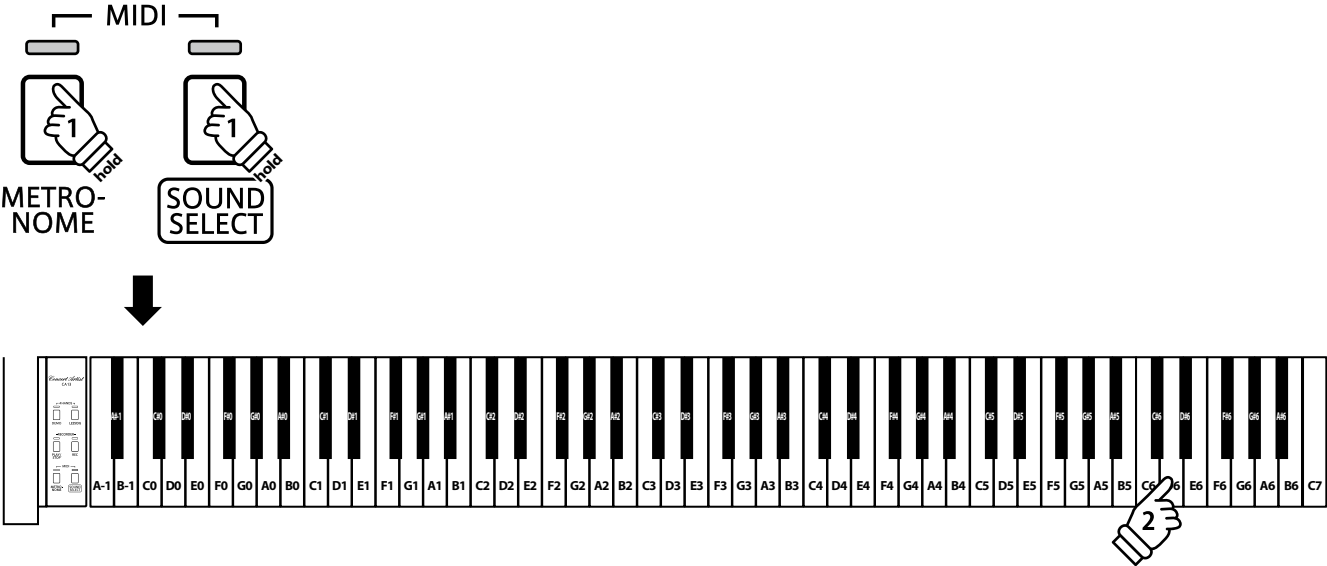

## 1 MIDI Channel (transmit/receive)


The MIDI Channel setting allows the transmit/receive channel to be specified. The selected channel will function as both the transmit and receive channel (separate transmit/receive channels cannot be specified).

### ■ Changing the MIDI Channel setting

Press and hold the METRONOME and SOUND SELECT buttons, then press the key assigned to the desired MIDI channel.

\* The MIDI channel can be specified within the range of 1-16.

\* The MIDI channel is automatically set to '1' when the instrument is turned on (default setting).

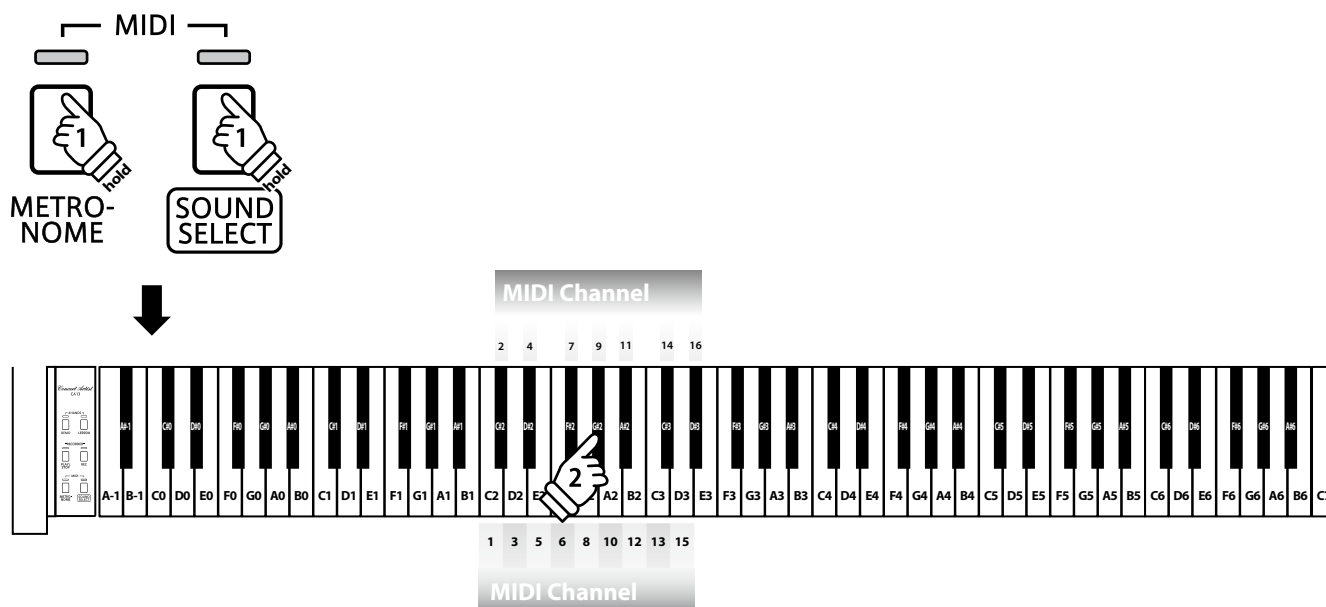



# 2 Local Control


The Local Control setting determines whether the instrument will play an internal sound when the keys are pressed. This setting is useful when using the CA13 digital piano to control an external MIDI device.

## Local Control settings

Local Control	Explanation	Key
On (default)	The instrument will play an internal sound and transmit information to an external MIDI device.	C#4
Off	The instrument will transmit information to an external MIDI device only.	D#4

## Changing the Local Control setting

Press and hold the METRONOME and SOUND SELECT buttons, then press the key assigned to the desired Local Control setting.

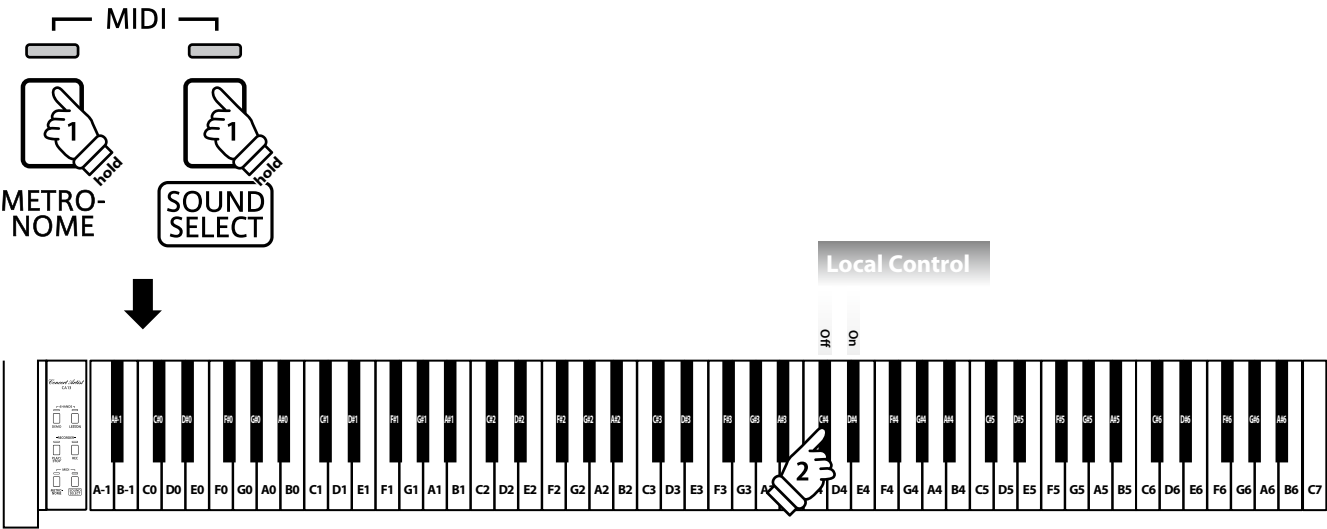

### 3 Multi-timbral Mode

The Multi-timbral mode setting determines whether or not the CA13 digital piano is able to receive MIDI information on more than one MIDI channel simultaneously. This allows the instrument to play back multi-track, multi-timbral performance data sent from an external MIDI device.

■ Multi-timbre settings


Multi-timbre	Explanation	Key
On	Multi-timbral mode enabled*	C#5
Off (default)	Multi-timbral mode disabled	D#5

\* Please refer to the 'Program Change Number List' below..

■ Changing the Multi-timbral mode setting

Press and hold the METRONOME and SOUND SELECT buttons, then press the key assigned to the desired Multi-timbre setting.

\* MIDI data received through channel 10 will not be performed when Multi-timbre is enabled.

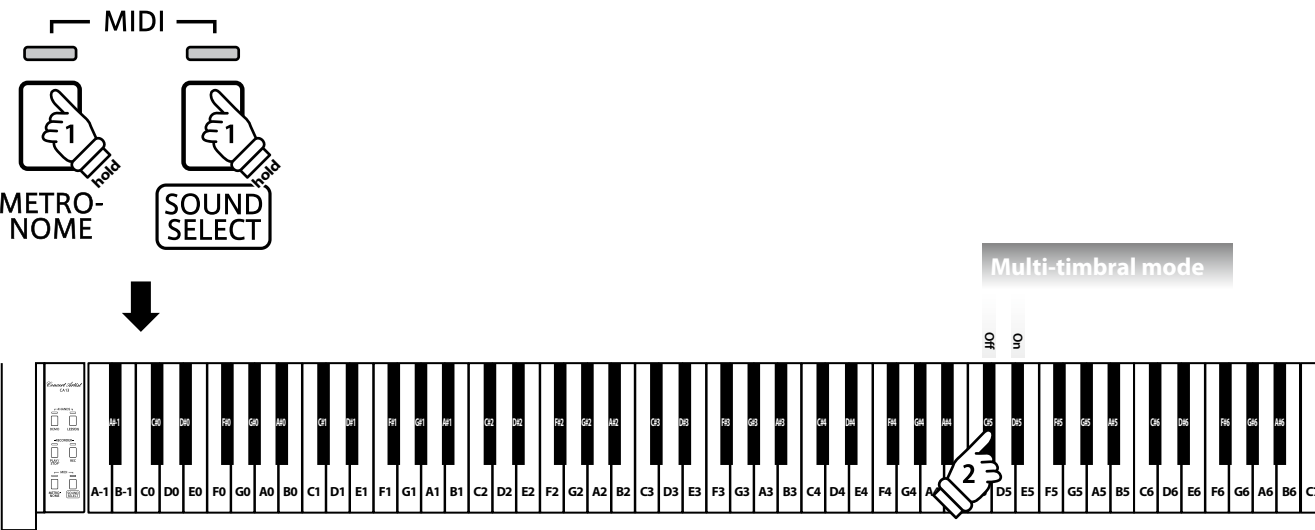

■ Program Change Number List

Sound name	Multi-timbral mode Off	Multi-timbral mode On		
	Program number	Program number	Bank MSB	Bank LSB
Concert Grand	1	1	121	0
Concert Grand 2	2	1	95	16
Studio Grand	3	1	121	1
Modern Piano	4	2	121	0
Slow Strings	5	45	95	1
Classic E. Piano	6	5	121	0
Church Organ	7	20	121	0
Harpsichord	8	7	121	0

# 4 Transmit MIDI Program Change

The Send Program Change Number setting determines whether or not the CA13 digital piano will transmit program change information when sounds are changes. It is also possible to transmit a program change number (ranging from 1 to 128) in order to change the sound of an external MIDI device.

## ■ Transmit MIDI Program Change settings

Transmit PGM#	Explanation	Key
On	The instrument will transmit program change numbers when changing sounds.	C#0
Off (default)	The instrument will NOT transmit program change numbers when changing sounds.	D#0

## ■ Changing the Transmit MIDI Program Change setting

Press and hold the METRONOME and SOUND SELECT buttons, then press the key assigned to the desired Transmit MIDI Program Change setting.

## ■ Sending a Program Change number

Press and hold the METRONOME and SOUND SELECT buttons, then enter the desired program change number to send using the number keys indicated below.

- \* Program change numbers are specified as three digits within the range of 001 - 128.
- \* The program change number will be transmitted automatically when the key for the third digit number is pressed.

MIDI

METRO-NOME

SOUND SELECT

↓

Transmit PGM#

Off

On

1

2

3

4

5

6

7

8

9


0

Transmit PGM#

Example: Transmit PGM#064

Enter 0, 6, then 4

# Connecting to Other Devices

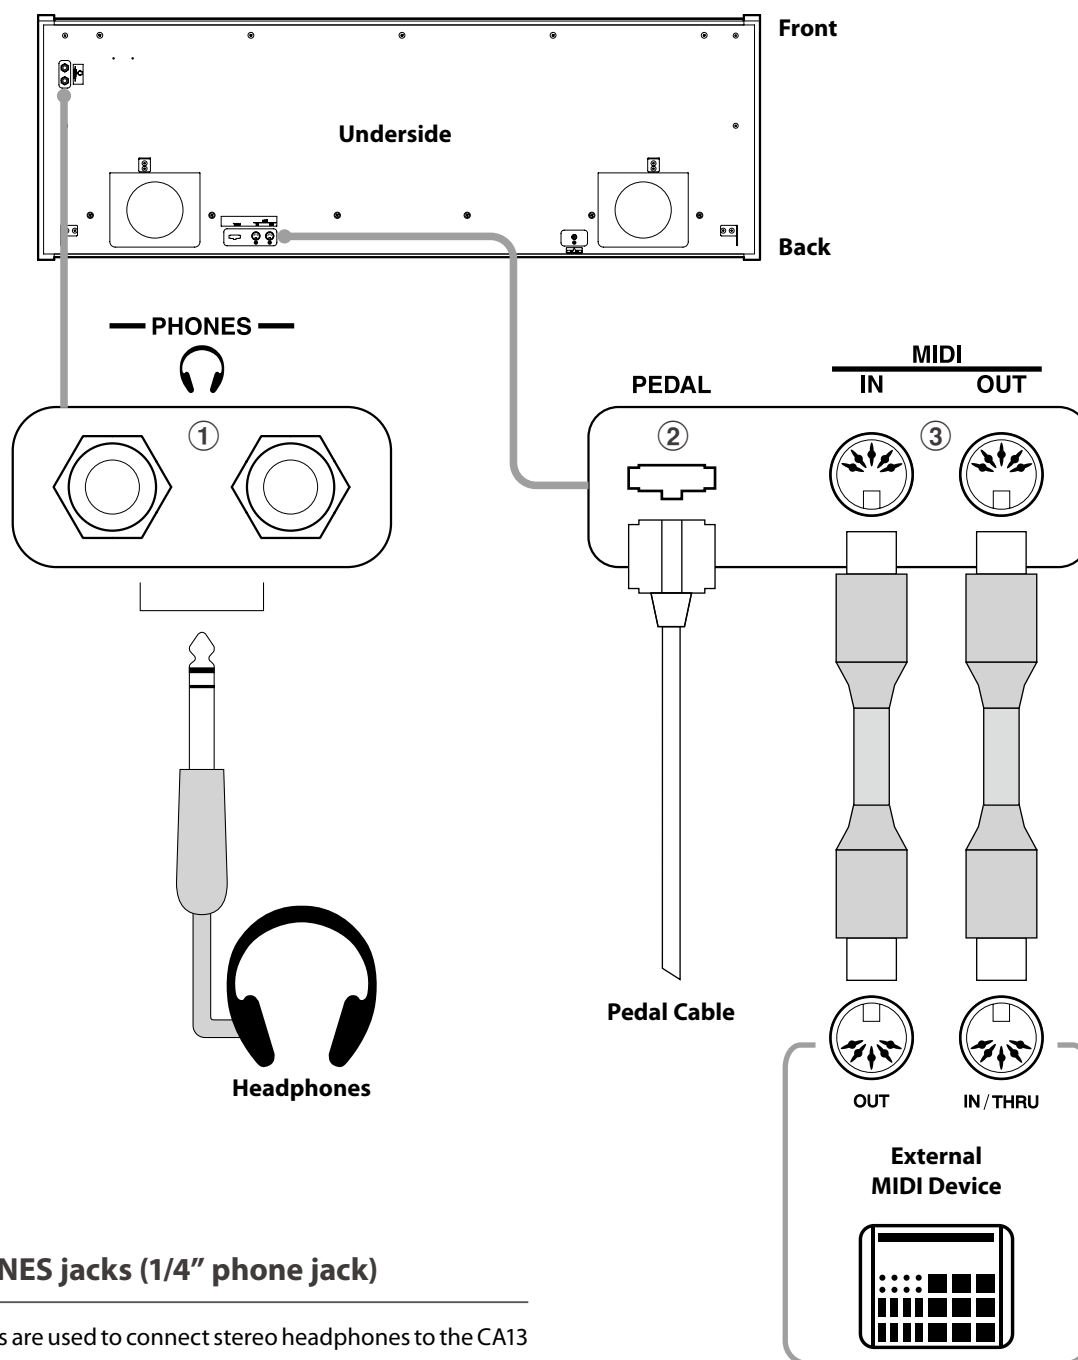

## ① PHONES jacks (1/4" phone jack)

These jacks are used to connect stereo headphones to the CA13 digital piano. Two pairs of headphones can be connected and used simultaneously. When a pair of headphones is connected, sound will not be produced by the speakers.

## ② PEDAL connector (1/4" phone jack)

This connector is used to connect the pedal board to the CA13 digital piano (see page 39).

## ③ MIDI IN/OUT jacks

These jacks are used to connect the CA13 digital piano to external MIDI devices, such as a sound module, or a computer with a MIDI interface.

# Troubleshooting

	Problem	Possible Cause and Solution	Page no.
Power	The instrument does not turn on.	Check that the power cable is firmly attached to the instrument, and connected to an AC outlet.	pp. 11
Sound	The instrument is turned on, however no sound is produced when the keys are played.	Check that the MASTER VOLUME slider is not set to the lowest position.	pp. 11
		Check that a pair of headphones (or headphone adaptor plug) are not connected connected to the PHONES jack.	pp. 11
		Check that Local Control is enabled in the MIDI Settings menu.	pp. 33
	The sound distorts when playing at very loud volume levels.	Check that the MASTER VOLUME slider is set to an appropriate level, reducing the volume if excessive distortion is heard.	pp. 11
Pedals	Strange sounds or noises are heard when playing with piano sounds.	The CA13 digital piano attempts to reproduce the rich variety of tones created by an acoustic grand piano as accurately as possible. This includes damper resonances and other subtle effects that contribute to the overall piano playing experience.	pp.27 pp.28
		While these additional effects are intended to enhance the realism of the instrument, it is possible to reduce their prominence, or disable them altogether using the sound settings.	
	The pedals are unreliable or do not function at all.	Check that the pedal cable is firmly connected to the instrument.	pp. 39
	When depressing a pedal, the pedal board flexes and is not firm.	Check that the pedal support bolt is fully extended.	pp. 39


# Assembly Instructions



Please read these assembly instructions thoroughly before attempting to assemble the CA13 digital piano. Please ensure that two or more people work on assembling the CA13 digital piano, especially when lifting the main body of the instrument onto the stand in step 3.

## ■ Included parts

Before attempting to assemble the CA13 digital piano, ensure that all parts below are included. A Phillips-head screwdriver (not included) will also be required in order to assemble the instrument.

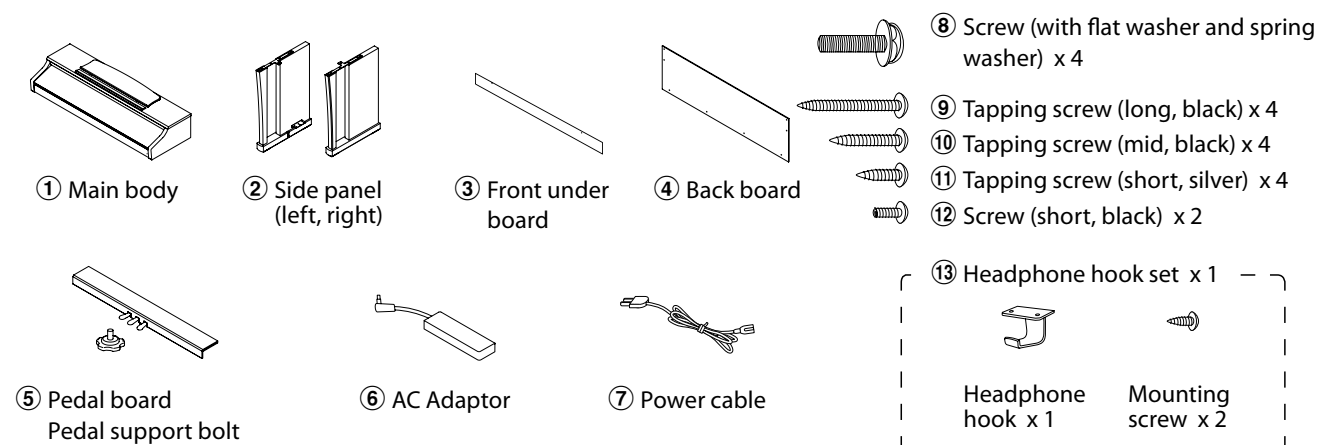

## 1. Assembling the side panels ②, pedal board, and pedal support bolt ⑤


Unfasten and extend the pedal connection cable attached to the bottom of the pedal board ⑤.

Insert the pedal support bolt approximately 1 cm into the pedal board, using the hole shown in the diagram.

Attach the pedal board ⑤ to the left and right side panels ② using the alignment screws located on either end of the pedal board. Ensure that the correct side panel is used for the left and right side.

Ensure that the pedal board and side panels make close contact, and that there are no large gaps between the assembled parts.


Insert the four short silver tapping screws ⑪ into the holes as shown, and securely fasten the pedal board to the left and right side panels.

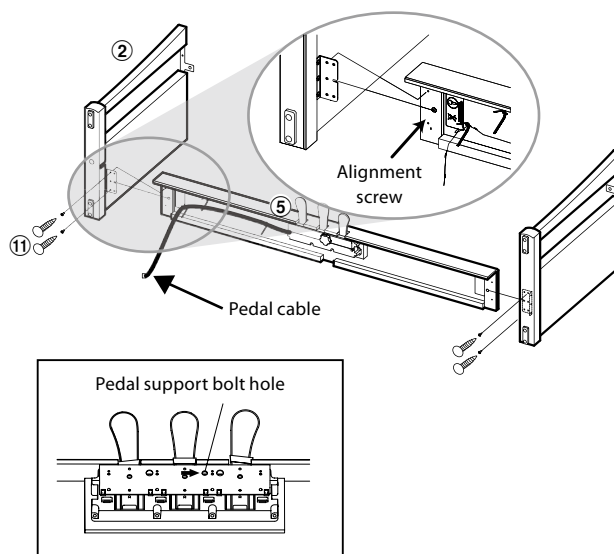

## 2. Attaching the back board ④

Allow the assembled pedal board and side panels to stand upright (vertically) on the floor.

Attach the back board ④ to the left and right side panels using the four long black tapping screws ⑨. Then attach the bottom of the back board to the pedal board using the four mid-length black tapping screws ⑩.

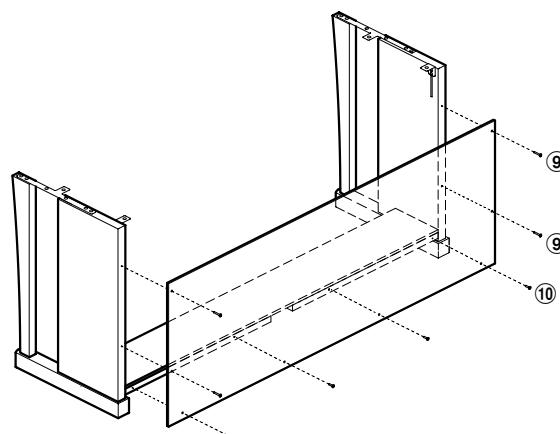

### 3. Mounting the main body ①



**Ensure that two or more people undertake the following step of the assembly process.**

Lift the main body ① and carefully place it onto the stand.

Position the main body towards the front of the stand, so that the metal fitting holes are visible when viewed from above.


Gently slide the main body backwards until the base engages with the fixings inside the side panels and locks into place.



**When lifting the main body onto the stand, be careful not to catch/trap hands and fingers.**

Secure the main body to the stand from below, using the four screws (with the flat washer and spring washer) ⑧.


First, loosely attach all four screws, adjusting the position of the main body on the stand. When all four screws are attached and the main body is correctly positioned on top of the stand, securely tighten all screws.

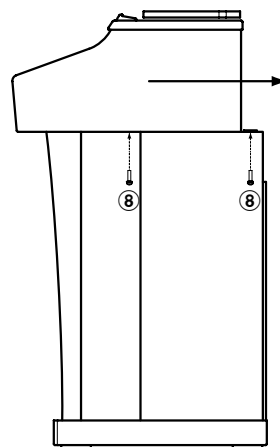

**Tighten all screws securely to ensure that the main body is firmly attached to the stand. Failing to do so may result in serious injury.**


### 4. Attaching the front under board ③

Attach the front under board ③ to the metal brackets located underneath the main body using two short black screws ⑫.

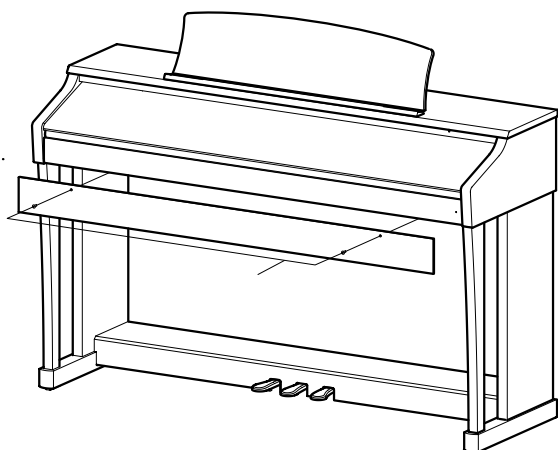

### 6. Attaching the headphone hook (optional)

If desired, attach the headphone hook to the underside of the main body using the two tapping screws provided.

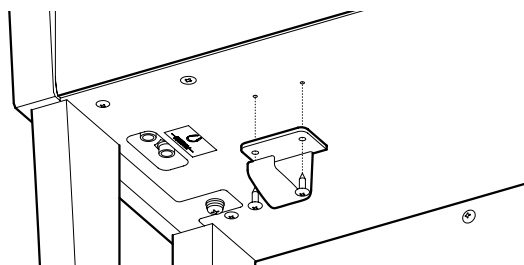


### 5. Connecting the pedal cable and AC adaptor

Connect the pedal cable to the PEDAL terminal located on the underside of the main body, ensuring the notched plug faces the rear of the instrument


Connect the AC power adaptor ⑥ to the DC IN terminal.

Use the binders to fix the cables in place.

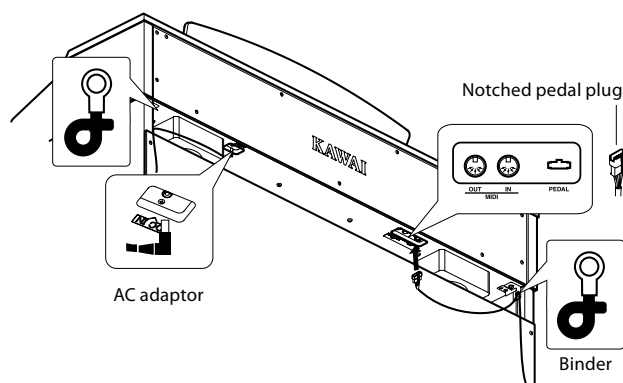

### 7. Adjusting the pedal support bolt

Turn the pedal support bolt anti-clockwise until it makes contact with the floor and supports the pedals firmly.

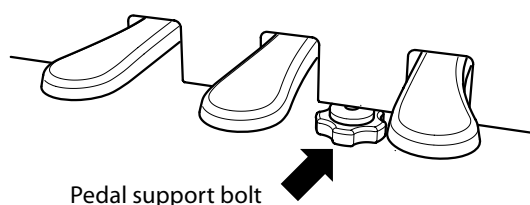

# Demo and Piano Music Song Lists

## ■ US, Canada, UK, and Australasia

Key	Song Title	Composer
A-1	Concert Grand	Kawai
B-1	Concert Grand 2	Kawai
C0	Studio Grand	Kawai
D0	Modern Piano	Kawai
E0	Air D dur,BWV.1068	J.S.Bach
F0	Das Wohltemperierte Klavier, I Teil,24 Praludium und Fuga,BWV.846 "PRALUDIUM C dur"	J.S.Bach
G0	French Suite No.1 "ALLEMANDE"	J.S.Bach
A0	French Suite No.3 "ALLEMANDE"	J.S.Bach
B0	French Suite No.5 "ALLEMANDE"	J.S.Bach
C1	French Suite No.5 "GAVOTTE"	J.S.Bach
D1	French Suite No.6 "ALLEMANDE"	J.S.Bach
E1	English Suite No.3 "GAVOTTE"	J.S.Bach
F1	Sonata No.28 in A Major, op.101 1st MOV.	L.V.Beethoven
G1	Sonata No.14 in C sharp Minor,op.27 No.2 "MOON LIGHT" 1st MOV.	L.V.Beethoven
A1	Sonata No.14 in C sharp Minor,op.27 No.2 "MOON LIGHT" 2nd MOV.	L.V.Beethoven
B1	Sonata No.8 in C Minor, op.13 "PATHETIQUE" 2nd MOV.	L.V.Beethoven
C2	6 Stucke, op.118 No.2 "INTERMEZZO in A Major"	J.Brams
D2	Walzer, op.39 "Valse As dur"	J.Brams
E2	Suite Bergamasque "CLAIR DE LUNE"	C.A.Debussy
F2	Suite Bergamasque "PRELUDE"	C.A.Debussy
G2	Reverie	C.A.Debussy
A2	3 Romances Sana Paroles No.3 in A flat Major, op.17	G.Faure
B2	Nocturne No.10 in E Minor	J.Field
C3	Nocturne No.5 in B flat Major	J.Field
D3	Lieder Ohne Worte Heft 1 in E dur, op.19b "SWEET REMEMBRANCE"	F.Mendelssohn
E3	Lieder Ohne Worte Heft 8 in g moll ,op.102 NO.4 "THE SIGHING WIND"	F.Mendelssohn
F3	Sonata in A Major, K.331 1st MOV.	W.A.Mozart
G3	Sonata in C Major, K.545 3rd MOV.	W.A.Mozart
A3	Sonata in G Major, K.283 1st MOV.	W.A.Mozart
B3	Sonata in G Major, K.283 2nd MOV.	W.A.Mozart
C4	Sonata in G Major, K.283 3rd MOV.	W.A.Mozart
D4	Sonata in F Major, K.547a 2nd MOV.	W.A.Mozart
E4	Ave Maria, D.839	F.Schubert
F4	Chopin	R.Schumann
G4	Coquette	R.Schumann
A4	Replique---Sphinxes	R.Schumann
B4	Fantasiestucke op.12 "DES ABENDS"	R.Shumann
C5	Kinderszenen op.15 "BITTENDES KIND"	R.Shumann
D5	Kinderszenen op.15 "TRÄUMEREI"	R.Shumann
E5	Kinderszenen op.15 "FÜRCHTENMACHEN"	R.Shumann
F5	Kinderszenen op.15 "VON FREMDEN LÄNDERN UND MENSCHEN"	R.Shumann
G5	Kinderszenen op.15 "GLÜCKES GENUG"	R.Shumann
A5	Kinderszenen op.15 "FAST ZU ERNST"	R.Shumann
B5	Kinderszenen op.15 "KIND IM EINSCHLUMMERN"	R.Shumann
C6	Barcarolle,op.37a-6	P.I.Tchaikovsky
D6	Casse-Noisette, op.71A No.2-iv "DANCE ARABE"	P.I.Tchaikovsky
E6	Slow Strings	Kawai
F6	Classic E.Piano	Kawai
G6	Church Organ	Kawai
A6	Harpsichord	Kawai



## ■ Rest of the World

Key	Song Title	Composer
A-1	Concert Grand	Kawai
B-1	Concert Grand 2	Kawai
C0	Studio Grand	Kawai
D0	Modern Piano	Kawai
E0	Tambourin	J.P.Rameau
F0	The harmonious blacksmith	G.F.Handel
G0	Menuett BWV.Anh.114	J.S.Bach
A0	Menuett BWV.Anh.115	J.S.Bach
B0	Menuett BWV.Anh.116	J.S.Bach
C1	Le Coucou	L.C.Daquin
D1	Gavotte	F.J.Gossec
E1	Menuett	L.Boccherini
F1	Thema und Variationen	W.A.Mozart
G1	Türkischer Marsch	W.A.Mozart
A1	Menuett	W.A.Mozart
B1	Sonate für Klavier No.14 "Mondschein"	L.v.Beethoven
C2	Sonate für Klavier No.8 "Pathétique"	L.v.Beethoven
D2	Für Elise	L.v.Beethoven
E2	Rondo favori	J.N.Hummel
F2	Impromptu op.90-4	F.P.Schubert
G2	Moments musicaux op.94-3	F.P.Schubert
A2	Entr'acte	F.P.Schubert
B2	Impromptu op.142-3	F.P.Schubert
C3	Auf Flügeln des Gesanges	F.Mendelssohn
D3	Frühlingslied	F.Mendelssohn
E3	Rondo Capriccioso	F.Mendelssohn
F3	Chanson de l'adieu	F.F.Chopin
G3	Raindrop	F.F.Chopin
A3	Petit chien	F.F.Chopin
B3	Nocturne No.2	F.F.Chopin
C4	Fantaisie-Impromptu	F.F.Chopin
D4	Polonaise No.3 "Militaire"	F.F.Chopin
E4	Polonaise No.6 "Héroïque"	F.F.Chopin
F4	Slow Strings	Kawai
G4	Classic E.Piano	Kawai
A4	Church Organ	Kawai
B4	Harpsichord	Kawai

# Lesson Function Song Lists

## ■ US, Canada, UK, and Australasia

Alfred's Basic Piano Library Lesson Book Level 1A	
A-1	Right & Left
B-1	Left & Right
C0	Merrily We Roll Along/O'er the Deep Blue Sea
D0	Hand-Bells
E0	Jolly Old Saint Nicholas
F0	Old MacDonald
G0	Batter Up!
A0	My Clever Pup
B0	The Zoo
C1	Playing in a New Position
D1	Sailing
E1	Skating
F1	Wishing Well
G1	Rain, Rain!
A1	A Happy Song
B1	Position C
C2	A Happy Song
D2	See-Saws
E2	Just a Second!
F2	Balloons
G2	Who's on Third?
A2	Mexican Hat Dance
B2	Rock Song
C3	Rockets
D3	Sea Divers
E3	Play a Fourth
F3	July the Fourth!
G3	Old Uncle Bill
A3	Love Somebody
B3	My Fifth
C4	The Donkey
D4	Position G
E4	Jingle Bells!
F4	Willie & Tillie
G4	A Friend Like You
A4	My Robot
B4	Rockin' Tune
C5	Indian Song
D5	Raindrops
E5	It's Halloween!
F5	Horse Sense

Alfred's Basic Piano Library Lesson Book Level 1B	
A-1	Step Right Up!
B-1	The Carousel
C0	Hail to Thee, America!
D0	Brother John
E0	Good Sounds
F0	The Cuckoo
G0	Money Can't Buy Ev'rything!
A0	Ping-Pong
B0	Grandpa's Clock
C1	When the Saints Go Marching In
D1	G's in the "BAG"
E1	Join the Fun
F1	Oom-Pa-pa!
G1	The Clown
A1	Thumbs on C!
B1	Waltz Time
C2	Good King Wenceslas
D2	The Rainbow
E2	Good Morning to You!
F2	Happy Birthday to You!
G2	Yankee Doodle
A2	The Windmill
B2	Indians
C3	New Position G
D3	Pedal Play
E3	Harp Song
F3	Concert Time
G3	Music Box Rock
A3	A Cowboy's Song
B3	The Magic Man
C4	The Greatest Show on Earth!
D4	The Whirlwind
E4	The Planets
F4	C Major Scale Piece
G4	G Major Scale Piece
A4	Carol in G Major
B4	The Same Carol in C Major
C5	French Lullaby
D5	Sonatina
E5	When Our Band Goes Marching By!

## ■ Rest of the World

Burgmüller 25 (25 Etudes Faciles, Opus 100)		Czerny 30 (Etudes de Mécanisme, Opus 849)	
A-1	La candeur	A-1	No. 1
B-1	Arabesque	B-1	No. 2
C0	Pastorale	C0	No. 3
D0	Petite réunion	D0	No. 4
E0	Innocence	E0	No. 5
F0	Progrès	F0	No. 6
G0	Courant Limpide	G0	No. 7
A0	La gracieuse	A0	No. 8
B0	La chasse	B0	No. 9
C1	Tendre fleur	C1	No. 10
D1	La bergeronnette	D1	No. 11
E1	Adieu	E1	No. 12
F1	Consolation	F1	No. 13
G1	La styrienne	G1	No. 14
A1	Ballade	A1	No. 15
B1	Douce plainte	B1	No. 16
C2	Babillarde	C2	No. 17
D2	Inquiétude	D2	No. 18
E2	Ave Maria	E2	No. 19
F2	Tarentelle	F2	No. 20
G2	Harmonie des anges	G2	No. 21
A2	Barcarolle	A2	No. 22
B2	Retour	B2	No. 23
C3	L'hirondelle	C3	No. 24
D3	La chevaleresque	D3	No. 25
		E3	No. 26
		F3	No. 27
		G3	No. 28
		A3	No. 29
		B3	No. 30

## ■ Lesson Function song book availability

Alfred's Basic Piano Library, Burgmüller: *Etudes Faciles*, and Czerny: *Etudes de Mécanisme* lesson song books are sold separately. Please check your local dealer for more information. Alfred's international offices may also be contacted directly:

USA / Canada	UK	Australia
Alfred Music Publishing	Alfred Publishing Co (UK) Ltd	Alfred Publishing Australia
PO Box 10003	Burnt Mill, Elizabeth Way	PO Box 2355
Van Nuys, CA 91410	Harlow, Essex,	Taren Point NSW 2229
Tel: +1 (800) 292-6122	Tel: +44 (0)1279 828960	Tel: +61 (02) 9524 0033
Email: sales@alfred.com	Email: music@alfredUK.com	Email: sales@alfredpub.com.au
Website: <a href="http://www.alfred.com">http://www.alfred.com</a>		

# Specifications

## ■ Kawai CA13 digital piano

Keyboard	88 wooden keys with Ivory Touch key surfaces RM3 Grand action
Sound Source	Progressive Harmonic Imaging™ (PHI)
Internal Sounds	Concert Grand, Concert Grand 2, Studio Grand, Modern Piano, Slow Strings, Classic E.Piano, Church Organ, Harpsichord
Polyphony	max. 96 notes
Reverb	Room, Stage, Hall
Internal Recorder	3 song recorder - approximately 15,000 note memory capacity
Lesson Function	Alfred or Burgmüller and Czerny lesson songs, depending on market area
Metronome	Beat: 1/4, 2/4, 3/4, 4/4, 5/4, 3/8, 6/8 Tempo: 10-300 bpm
Demo Songs	8 songs
Piano Music	29 or 42 pieces, depending on market area
Keyboard Modes	Dual Mode (with adjustable volume balance) Four Hands Mode (with adjustable split point)
Other Functions	Touch, Transpose, Tuning, Reverb, Damper Resonance, Brilliance, MIDI Channel, Local Control, Multi-timbral mode, Transmit Program Change Number
Pedals	Sustain (with half-pedal support), Soft, Sostenuto
Jacks	MIDI (IN/OUT), Headphones x 2
Speakers	12 cm x 2 (full range speakers) 5 cm x 2 (tweeters)
Output Power	15 W x 2
Power Consumption	30 W
Key Cover	Sliding type
Finish	Premium Black Satin Premium Rosewood Premium Cherry
Dimensions (Not including music rack)	1370 (W) x 464 (D) x 883 (H) mm
Weight	59 kg

# MIDI Implementation Chart

## ■ Kawai CA13 digital piano

Date : May 2010 Version : 1.0

Function		Transmit	Receive	Remarks
Basic channel	At power-up	1	1	
	Settable	1 - 16	1 - 16	
Mode	At power-up	Mode 3	Mode 1	** Omni mode is on at power-up. Omni mode can be turned off through MIDI channel setting operations.
	Message	×	Mode 1, 3**	
	Alternative	*****	×	
Note number		9 - 120*	0 - 127	* 9-120, including transpose
	Range	*****	0 - 120	
Velocity	Note on	○ 9nH v=1-127	○	
	Note off	× 9nH v=0	×	
After touch	Key specific	×	×	
	Channel specific	×	×	
Pitch bend		×	×	
Control change				
	7	×	○	Volume
	64	○ (Right pedal)	○	Damper pedal
	66	○ (Middle pedal)	○	Sostenuto pedal
	67	○ (Left pedal)	○	Soft pedal
Program change settable range		○ (0 - 127)	○ (0 - 127)	
		*****		
Exclusive		○	○	Transmission can be selected
Common	Song position	×	×	
	Song selection	×	×	
	Tune	×	×	
Real time	Clock	×	×	
	Commands	×	×	
Other functions	Local On / Off	×	○	
	All notes Off	×	○	
	Active sensing	○	○	
	Reset	×	×	
Remarks				

Mode 1: omni mode On, Poly    Mode 2: omni mode On, Mono

○ : Yes









SOUND

SOUND SELECT

+

SOUND SELECT

Dual Balance

Reverb

Damper Resonance  
(For Concert Grand 1 / 2,  
Studio Grand only)

Touch

Tuning  
(427Hz ~ 453Hz)

Transpose  
(-12 ~ +12)

Brilliance  
(-10 ~ +10)

OFF

ON

SMALL

MEDIUM

LARGE

OFF

ON

ROOM

STAGE

HALL

OFF

ON

C2

D2

E2

F2

G2

A2

OFF

ON

C3

D3

E3

F3

G3

A3

OFF

ON

C4

D4

E4

F4

G4

A4

OFF

ON

C5

D5

E5

F5

G5

A5

OFF

ON

C6

D6

E6

F6

G6

A6

+

-

+

A-1

B-1

C0

D0

E0

F0

G0

A0

B0

C1

D1

E1

F1

G1

A1

B1

C2

D2

E2

F2

G2

A2

B2

C3

D3

E3

F3

G3

A3

B3

C4

D4

E4

F4

G4

A4

B4

C5

D5

E5

F5

G5

A5

B5

C6

D6

E6

F6

G6

A6

B6

C7

Harpischord

Church Organ

Classic E.Piano

Slow Strings

Modern Piano

Studio Grand

Concert Grand 2

Concert Grand

Sound Select

(Dual Mode = Two keys)

Tuning Value (3 digits)

1

2

3

4

5

6

7

8

9

0

METRONOME

METRO-NOME

+

METRO-NOME

Time Signature

Metronome Tempo (2 or 3 digits)

Metronome Volume

1/4

2/4

3/4

4/4

5/4

3/8

6/8

A-1

B-1

C0

D0

E0

F0

G0

A0

B0

C1

D1

E1

F1

G1

A1

B1

C2

D2

E2

F2

G2

A2

B2

C3

D3

E3

F3

G3

A3

B3

C4

D4

E4

F4

G4

A4

B4

C5

D5

E5

F5

G5

A5

B5

C6

D6

E6

F6

G6

A6

B6

C7

TEMPO +

TEMPO -

1

2

3

4

5

6

7

8

9

0

VOLUME UP

VOLUME DOWN

1

2

3

4

5

6

7

8

9

10

DEMO

DEMO

+

DEMO

Enter Demo mode

Select Demo song

DEMO

DEMO

OR

SOUND SELECT

LESSON

Selecting a Lesson book and song

Book 2 \*

A-1	B-1	C0	D0	F0	G0	A0	C1	D1			
1	2	3	4	5	6	7	8	9	10	11	...

Song Number

\*Press this key before selecting the song to select Book 2

Listening to the song

4HANDS  
LESSON  
RECORDER-  
PLAY/STOP  
MIDI  
METRO-NOME  
SOUND SELECT

Selecting the part to practice

MIDI  
METRO-NOME  
SOUND SELECT  
L  
Press once:  
Left-hand only

MIDI  
METRO-NOME  
SOUND SELECT  
R  
Press twice:  
Right-hand only

MIDI  
METRO-NOME  
SOUND SELECT  
L&R  
Press 3 times:  
Both Left and Right hands

RECORDER

Record song

REC  
REC  
Song Selection  
Song 1  
Song 2  
Song 3  
PLAY/STOP  
PLAY/STOP  
Song Selection  
Song 1  
Song 2  
Song 3

Play song

PLAY/STOP  
Song Selection  
Song 1  
Song 2  
Song 3

Erase all songs

-RECORDER-  
PLAY/STOP  
REC  
POWER  
1 Hold both buttons  
2 Turn the power on

MIDI

Transmit MIDI Program Change

OFF ON

MIDI Channel

2 4 7 9 11 14 16

MIDI Local Control

OFF ON

Multi-timbral Mode

OFF ON

MIDI  
METRO-NOME  
SOUND SELECT  
+  
A-1 B-1 C0 D0 F0 G0 A0 C1 D1 F1 G1 A1 B1 C2 D2 F2 G2 A2 C3 D3 F3 G3 A3 C4 D4 F4 G4 A4 B4 C5 D5 F5 G5 A5 B5 C6 D6 F6 G6 A6 B6 C7

1 2 3 4 5 6 7 8 9 0  
Program Number (3 digits)

1 3 5 6 8 10 12 13 15  
MIDI Channel





CA13 Owner's Manual

KPSZ-0341 : 816827

OW1047E-J1007

Version 2.1

Printed in Indonesia

Copyright © 2010 Kawai Musical Instruments Mfg. Co., Ltd. All Rights Reserved.